


NEST SWING




NEST SWING INSTRUCTIONS

The tool & parts list (pic 1)

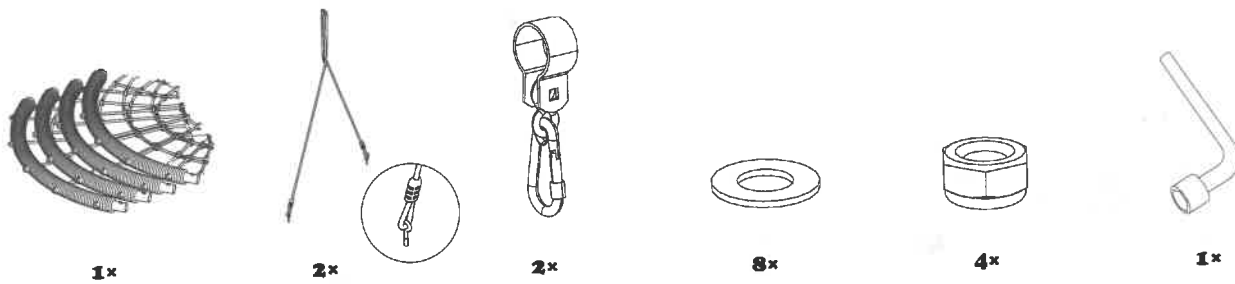

Assembly instructions (pic 2)

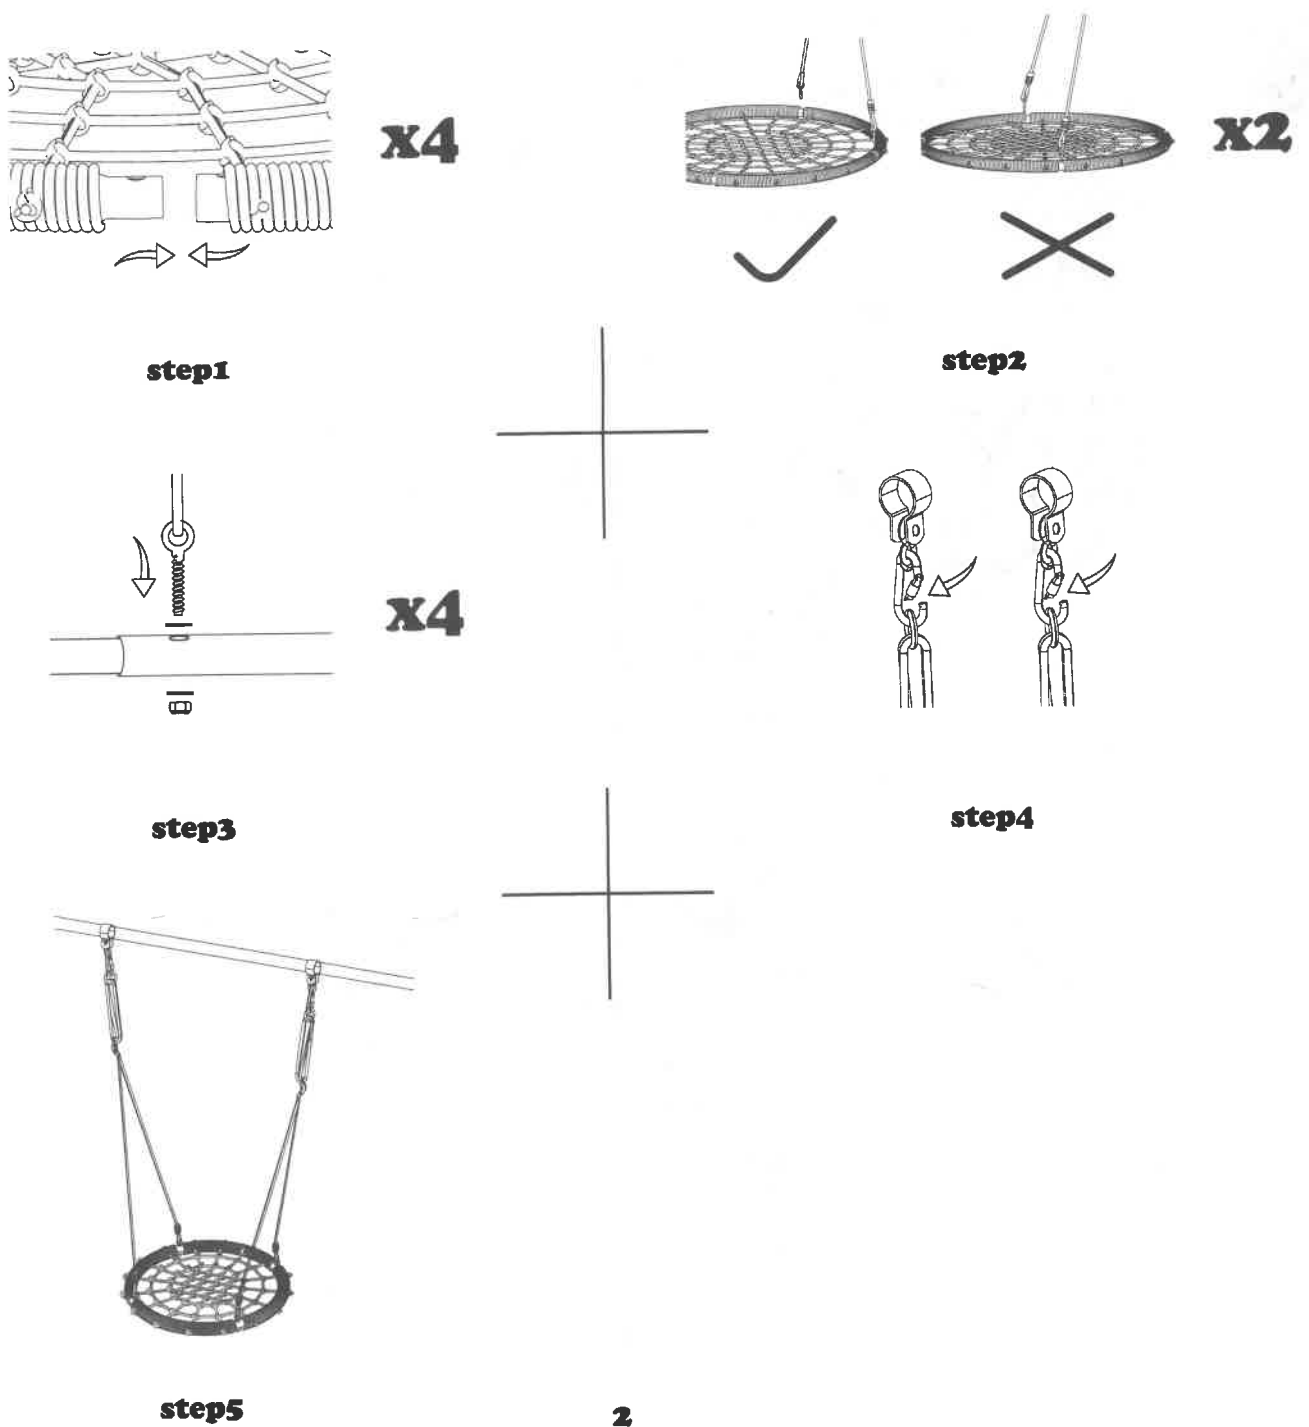

HOW TO USE YOUR NEST SWING

BEFORE HANGING, BE SAFE HAVE FUN

- Your swing area should be over soft, flat terrain and free of obstacles. **DO NOT INSTALL THE SWING OVER CONCRETE, ASPHALT OR ANY OTHER HARD SURFACE.** Trust us on this one.
- Don't pile on too many kids, the swing is built for 1 or 2 with a max weight of 130kgs.
- Adult supervision is advised at all times during outdoor play.

SETUP INSTRUCTIONS

- **Step 1:** Take swing out of the box . Unfold the four sections. Check you have all parts and tools as shown (PIC 1)
- **Step 2:** Insert one pole section into the next and then thread the bolt through using the bolt to fasten each section together. Repeat until all sections are secured. Please note - make sure the bolts are tightened properly underneath the swing so that the connections are secure before use.

ASSEMBLY ADVICE

- The assembly of the product must be done carefully and by an able-bodied adult. If in any doubt, ask a technically qualified person.
- Make sure the four pole sections onto flat level after assembly , then tighten with bolts.

WARNING!

- The disassembled product may contain small parts which pose a choking hazard to children under 3
- Only for the domestic use.
- Be careful during assembly of the tube sections, as there is a risk of pinching your skin when the tubes are inserted into one another.
- Children should supervised by an adult at all times.

IMPORTANT:

- This product may contain sharp points and small parts prior to assembly.
- The owner's manual contains safety, assembly, use instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.
- For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.
- This Nest Swing is designed for Children 3-14 years old and for the limit weight of 130kgs.
- To prolong the life of your product, remove from frame when not in use and during winter months

GENERAL SAFETY

- This product is intended for outdoor, domestic use only.
- This product may only be used with adult supervision at all times.
- **WARNING!** No eating while using the product.
- The packaging material is not suitable for children due to choking and suffocation hazards.

RISK OF INJURIES

- **Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician. Funky monkey Bars customer service 1300912198.**
- **Check the product before each use. Defective parts must be changed immediately as they can impair the function and the safety of the product.**
- **Do not place any objects or body parts in the product's openings.**

PRODUCT DAMAGE

- **Do not make alterations to the product. Only use original spare parts. Qualified technicians should only carry out repairs – improper repairs can lead to danger for the user. Use this product only as described in this manual.**