


FUNKY Monkey bars®

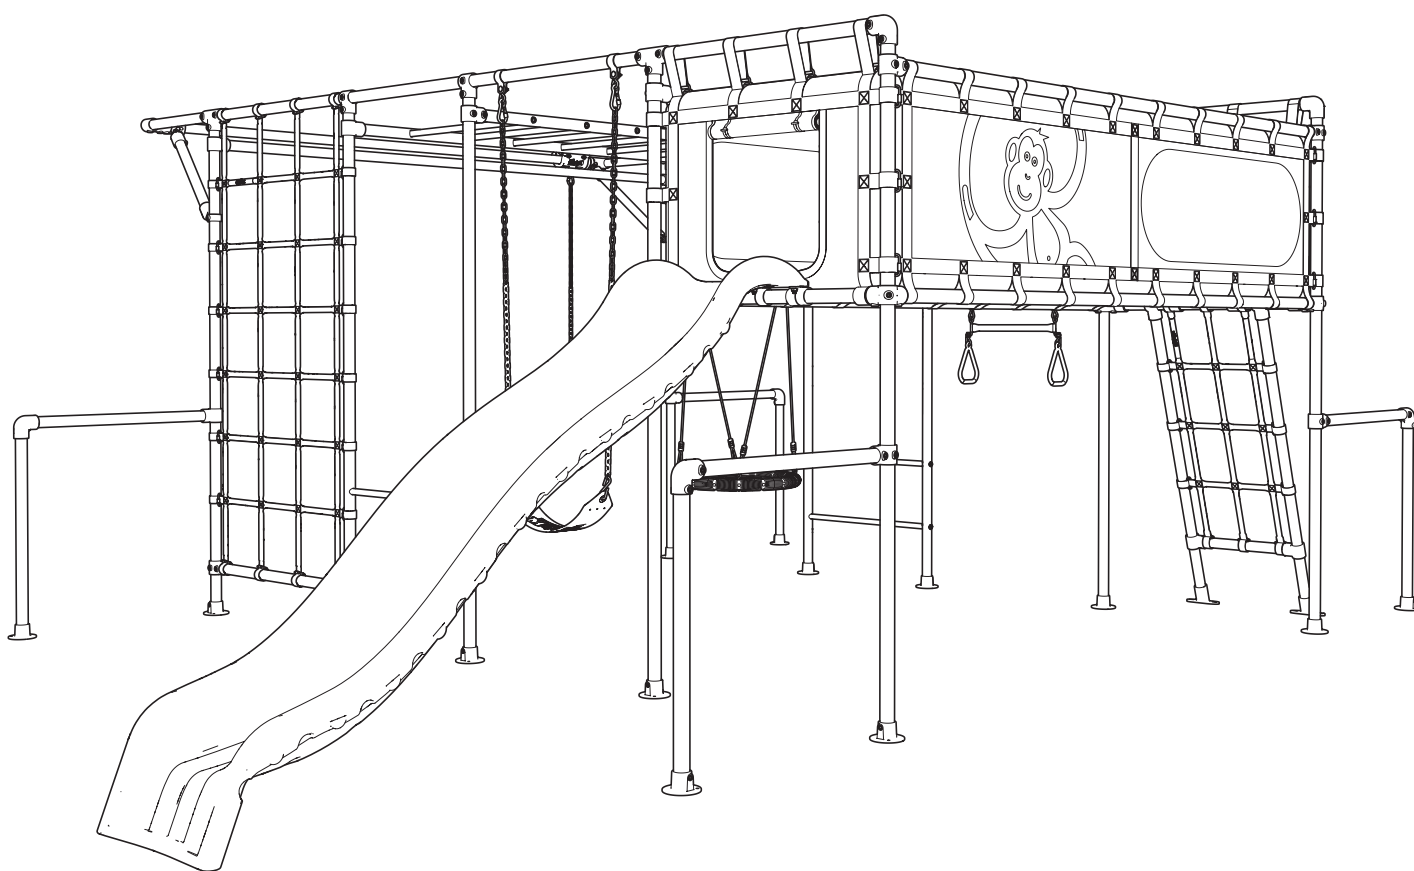

GORILLA MAX ASSEMBLY INSTRUCTIONS

CONTENTS

Warnings	Page 1
Assembly Tips	Page 3
Inventory	Page 5
Assembly Instructions	Page 7
Maintenance	Page 37

WARNING

PLEASE CAREFULLY READ ALL INFORMATION CONTAINED IN THIS ASSEMBLY MANUAL BEFORE YOU INSTALL AND USE YOUR FUNKY MONKEY BARS®.


SAFETY NOTICE

1. Any person handling or using the Funky Monkey Bars® products must follow the instructions as described in this document. The person in charge of assembling and using the equipment must ensure that the recommendations for use given in this document are seen by all users.
2. Only use the Funky Monkey Bars® after they have been fully assembled and after checking that the fittings are tightened properly (*refer to page 3 - Correct Tightening Method*).
3. DO NOT install your Funky Monkey Bars® over concrete, asphalt, packed earth, wood decking or any other hard surface. A fall onto a hard surface can result in serious injury or death.
4. Inspect all grub screws, bolts and nuts at the beginning of each play session to ensure your Funky Monkey Bars® are tight and secure.
5. Ensure all tubes are fully inserted into fittings until you hear the magic "CLUNK" sound.
6. Ensure your Funky Monkey Bars® are properly secure at ALL times. Pegs are in place and inserted fully into the ground.
7. DO NOT exceed the maximum load/weight limit as recommended by Funky Monkey Bars®.
8. Children should be supervised by an adult at all times.
9. Installing a gym/crash mat under the fall zone area of your Funky Monkey Bars® would be recommended for children learning this new skill. This will reduce the chance of injury and build the child's confidence while they build strength and master the skill.
10. Ensure you have thoroughly read your assembly and installation instructions and viewed our on-line installation videos at <https://www.funkymonkeybars.com/blogs/installation-maintenance-videos>
11. DO NOT climb, sit or stand on top of the monkey bar (horizontal ladder) section.
12. DO NOT jump from the top of any section of the monkey bar.
13. DO NOT use your Funky Monkey Bars® when wet as the steel will be slippery.
14. DO NOT attach items to your frame that are not designed specifically to be used with Funky Monkey Bars®, especially lower quality products that have not been approved by Funky Monkey Bars®.
15. Ensure the height of your Funky Monkey Bars® (horizontal ladder) are set at a level that is age appropriate.
16. DO NOT install your Funky Monkey Bars® over or near objects that could interfere with users in an unsafe way. Maintain a clear area around your Funky Monkey Bars®.
17. DO NOT use your Funky Monkey Bars® while under the influence of drugs and alcohol.
18. Wear clothing free of drawstrings, hooks, loops or anything that could get caught while using your Funky Monkey Bars® and result in entanglement and/or strangulation.


ASSEMBLY

1. Keep small children away from the Funky Monkey Bars® during assembly.
2. Do not attempt to use the Funky Monkey Bars® until it is completely assembled and every fitting is tight and secured.
3. Installation typically takes 2-4 hours to complete. Two people are recommended for assembly.
4. Ensure all fittings are tightened to the correct tightening method as described on page 3.
5. Assembly should be carried out on clean, dry, level surface


Please refer to the video section on the Funky Monkey Bars® website for more handy tips and assembly instructions at <http://www.funkymonkeybars.com/pages/videos>

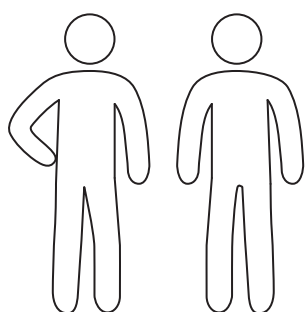

Assembly requires 2 adults.

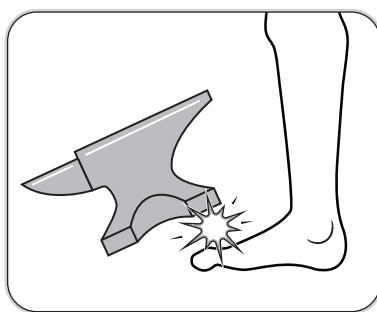

Heavy items !

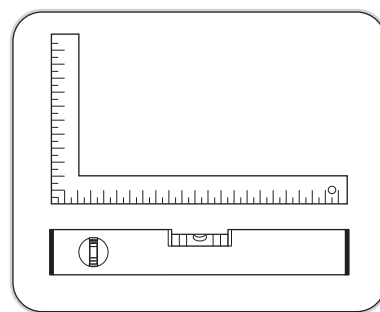

Work on flat level surface.

LOCATION

1. A safe fall zone around your Funky Monkey Bars® is essential. A minimum distance of 1.5m to 2m (5 ft to 6.5ft) is recommended around the elevated hanging points of your Funky Monkey Bars®.
2. Place your Funky Monkey Bars® on level ground, away from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires and remove any obstructions beneath your Funky Monkey Bars®.
3. Ensure your Funky Monkey Bars® are positioned away from retaining walls, pool fences, structures and other play equipment. Maintain a clear space around the whole perimeter of your Funky Monkey Bars®.
4. Place your Funky Monkey Bars® on the most level surface available.

MAINTENANCE



1. At the beginning of each heavy play session we recommend the following maintenance processes be performed on your Funky Monkey Bars®:
 - Tighten all bolts, grub screws and applicable hardware (as per page 3)
 - Lubricate all metallic moving parts as per instructions (flying fox, swing hooks etc)
 - Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing.
 - Check all moving parts including swing seats, shackles, snap hooks, chains and trolleys for wear, rust, or other deterioration. Replace as needed.
2. Twice a month during play season we would recommend the following maintenance processes be performed on your Funky Monkey Bars®:
 - Tighten all connections and hardware
 - Check all protective coverings on bolts, pipes, edges and corners. Replace if they are loose, cracked or missing.
3. Once a month during play season we would recommend the following maintenance processes be performed on your Funky Monkey Bars®:
 - Lubricate all metallic moving parts as per instructions (flying fox, swing hooks etc). If swings start to squeak then lubricate swing hooks.
 - Check all moving parts including swing seats, ropes, chains and trolleys for wear, rust, or other deterioration. Replace as needed.
 - Owners shall be responsible for maintaining the legibility of any warning labels.

For additional information concerning your Funky Monkey Bars®, please contact our customer service team or check our website for any important updates. Phone - 1300 912 198 or www.funkymonkeybars.com


ASSEMBLY TIPS

CORRECT INSERTION INTO FITTINGS - (INDICATIVE DIAGRAM SHOWN)


All tubes must be fully inserted until contact is made with adjoining tube

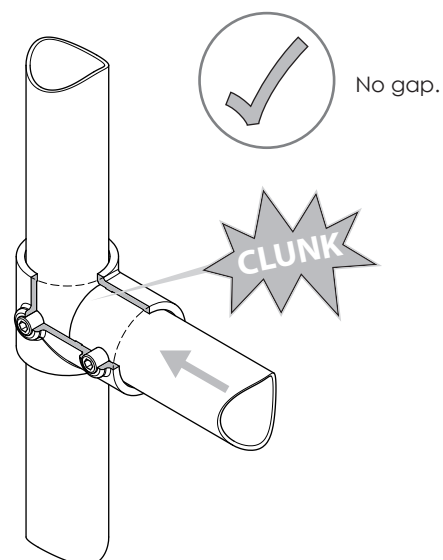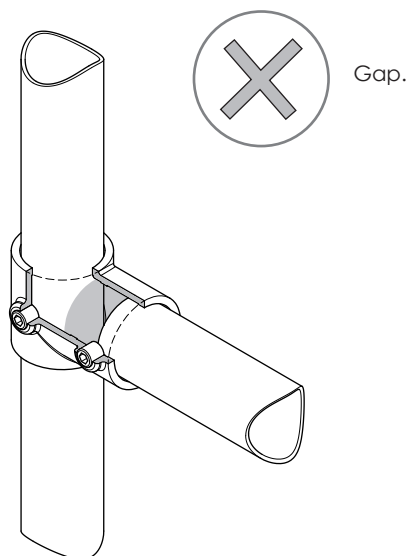

CORRECT TIGHTENING METHOD OF GRUB SCREWS - (INDICATIVE DIAGRAM SHOWN)

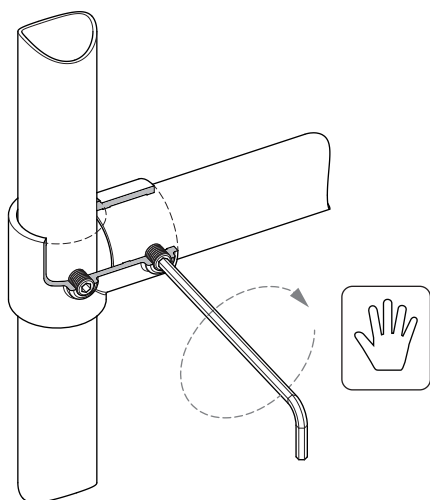


1. With long end of allen key, hand tighten grub screw as much as possible.

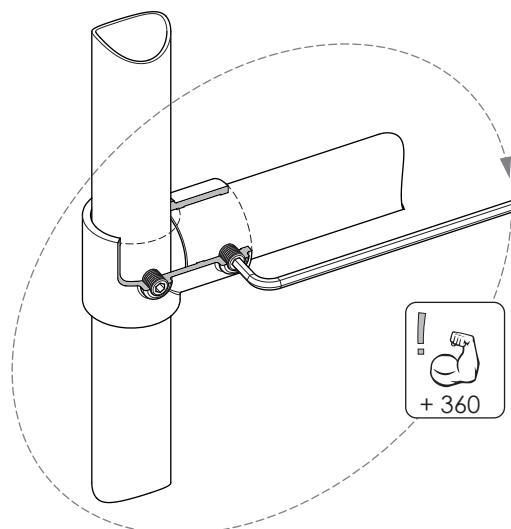


2. Using other end of the allen key do one full 360 degree turn as a minimum, use muscles!



CORRECT TIGHTENING METHOD OF RUNG BOLTS - (INDICATIVE DIAGRAM SHOWN)

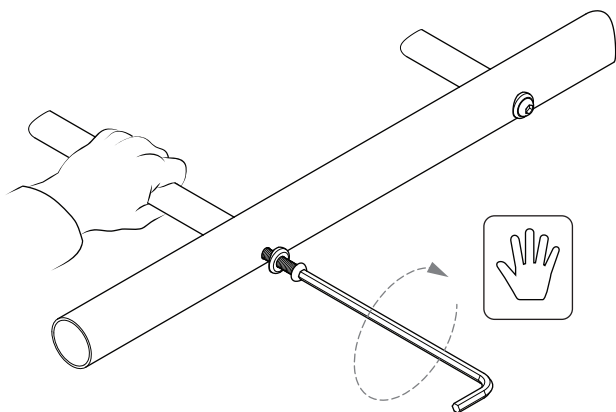


1. With long end of allen key, hand tighten bolt hard up against washer and outside of tube. Hold rung to avoid rotation.

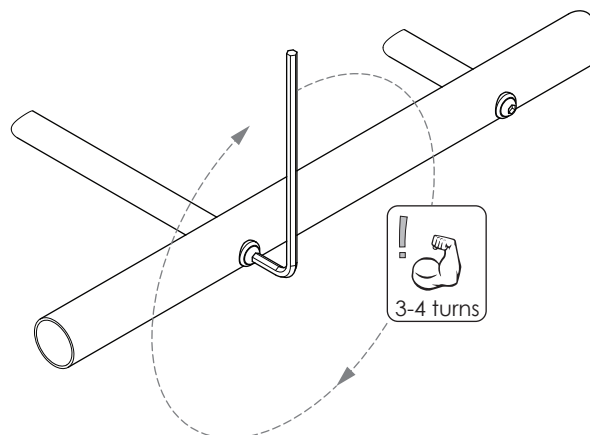


2. Using short end of the allen key fully tighten, approximately 3-4 full turns .



IT IS CRITICAL YOUR MAIN FRAME IS 100% SQUARE AND LEVEL (INDICATIVE DIAGRAM SHOWN)


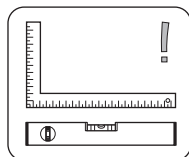


Check assembly is 100% level, square & straight.

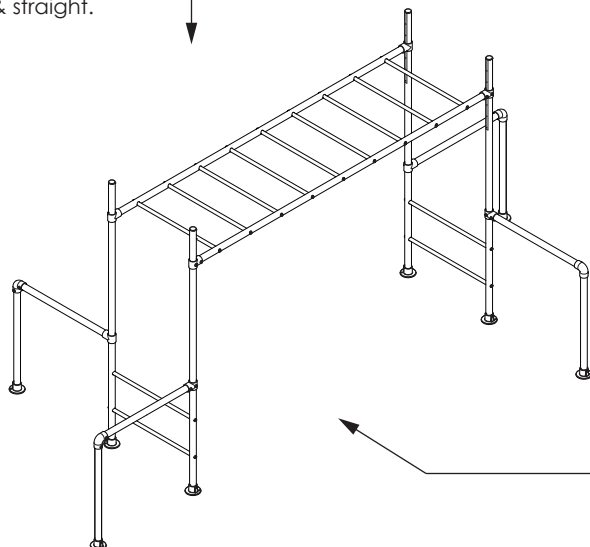

PLAN VIEW


SIDE VIEW

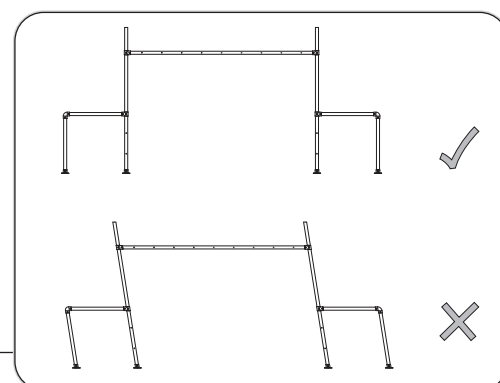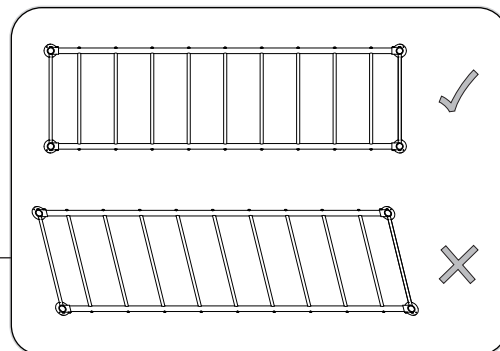

If your frame is not straight or level remove pegs, loosen grub screws, re-adjust re-tighten and re-peg the frame.


INSTALLATION ON A SLOPE

If your frame is being installed on a slope ensure the monkey ladder bar is level. Either install at different heights on the legs or dig down at one end until level.

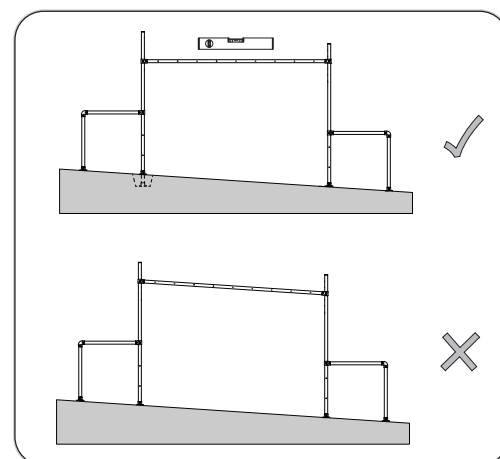


FIXING TYPICAL ORIENTATION - (INDICATIVE DRAWING SHOWN)

Unless otherwise stated all grub screws and fittings should face downwards and outwards. This will reduce weathering damage, help with assembly and ease of maintenance.

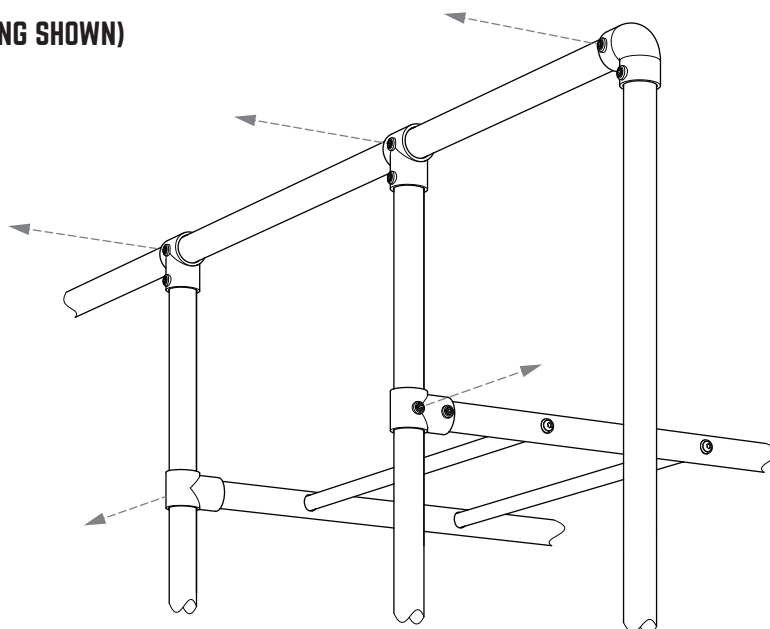


INVENTORY


TOOLS REQUIRED FOR INSTALLATION

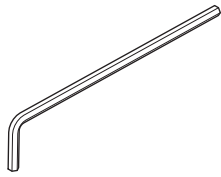


1x
6mm Allen key
(Included)

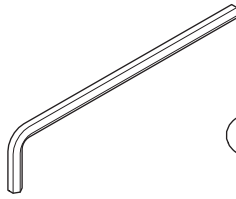


1x
8mm Allen key
(included)

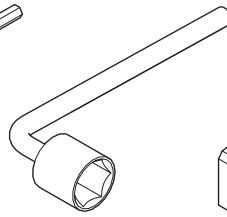

1x
17mm Spanner
(Included)

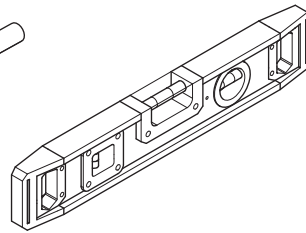


1x
Spirit Level
(Not included)

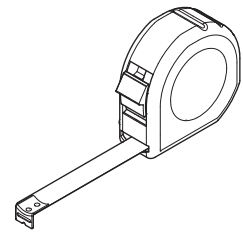


1x
Tape Measure
(Not included)


FITTINGS

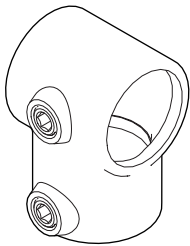


22x 101-D48
Short Tee

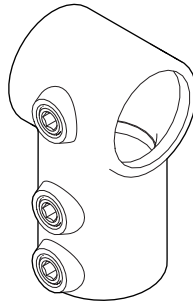


2x 101L-D48
Short Long Tee

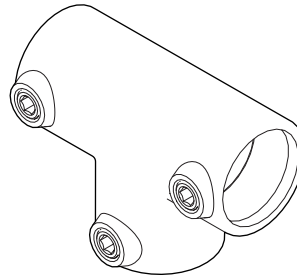


4x 104L-D48
Long Tee

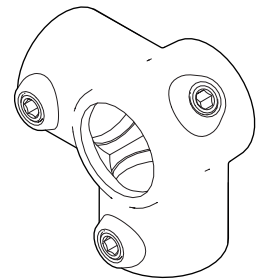


4x 116-D48
Corner Through

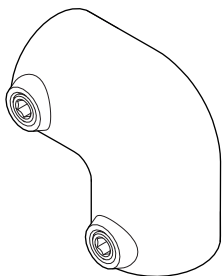


6x 125-D48
Elbow

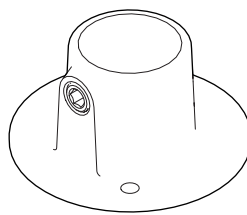


12x 131-D48
Base Plate

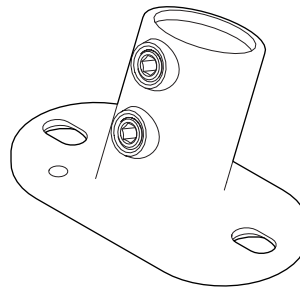

2x 133-D48
Angled Base Plate

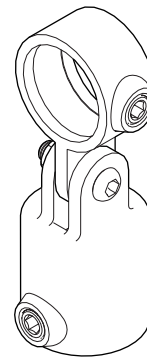


4x 173M/F-D48
Swivel Combination

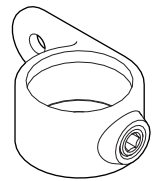


3x 199-D48
Single Hole Bracket

HARDWARE



27x
M10 Bolt




54x
Rung Insert



27x
Washer



54x
M10 Hex Nut

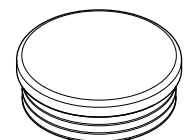

4x
Plastic End Cap




4x
Height Sticker




1x
Logo Plate


ACCESSORIES




1x
Slide

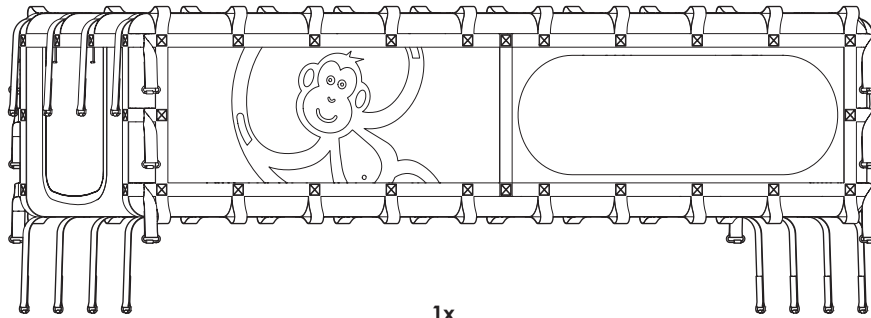


1x
Clubhouse

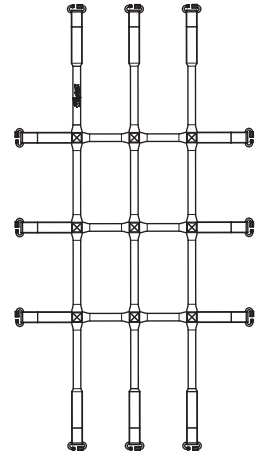

1x
Small Cargo Net

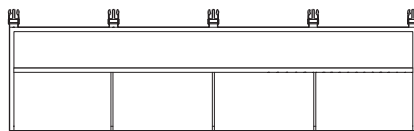


1x
Attachable Pockets

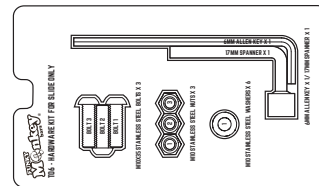

1x
T06 - Hardware Kit for Slide


COMPONENTS (ACCESSORIES IF APPLICABLE)

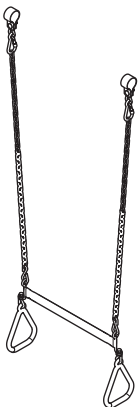


1x
Trapeze



1x
Sling swing

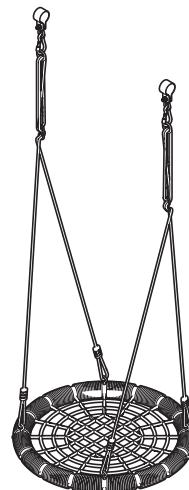

1x
Small Nest Swing

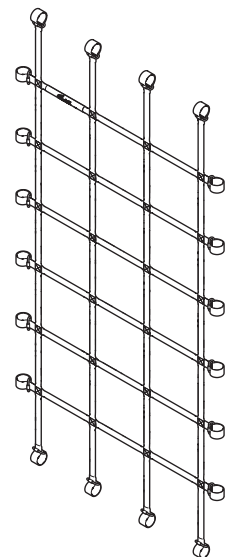

1x
Cargo Net

TUBES


13x
Rung Tube

25Dia. x 850mm



1x
Slide Tube

48Dia. x 500mm




4x
Support Tube

48Dia. x 600mm



8x
Twirly Tube

48Dia. x 900mm




3x
Tube

48Dia. x 1040mm




2x
Clubhouse Tube

48Dia. x 1085mm




2x
Small Ladder Tube

48Dia. x 1475mm




6x
Swing Leg Tube

48Dia. x 2300mm




7x
Tube

48Dia. x 2950mm




4x
Adj. Leg Tube

48Dia. x 2300mm



2x
Ladder Tube


48Dia. x 2950mm




One of the best things about a Funky Monkey Bar is the ability to add new equipment and accessories as your child and family grows. You can swap or add accessories to your existing frame, or add extra frames that will give you more versatility to attach equipment. Check out what we've got in store now at...

WWW.FUNKYMONKEYBARS.COM

1 RUNG ASSEMBLY (x13)




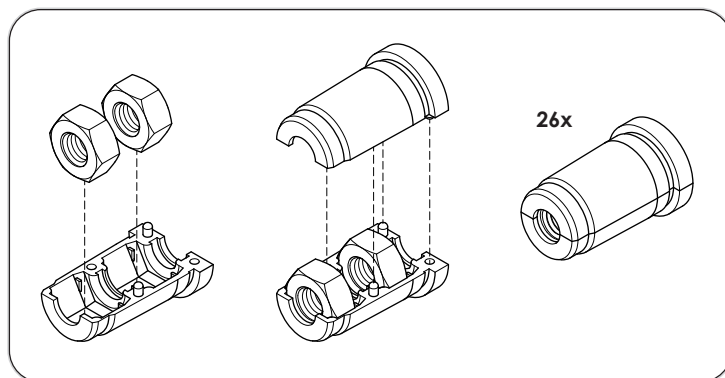


1. Assemble plastic rung inserts as shown above.

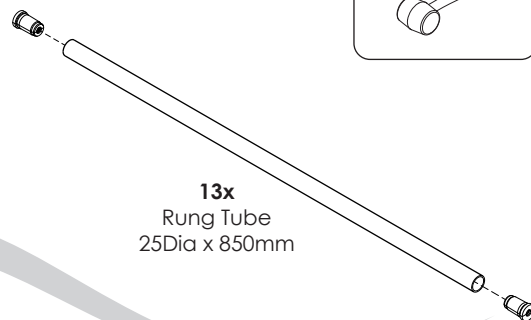


2. Push inserts into both ends of all rungs.


2 MONKEY BAR LADDER ASSEMBLY

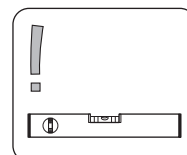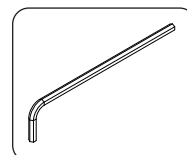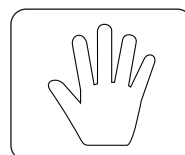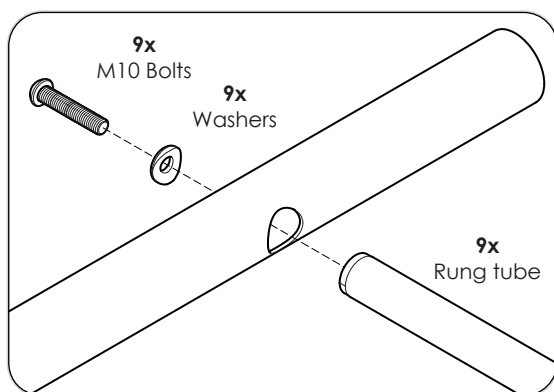



Hand tighten all bolts, Assemble on flat surface.

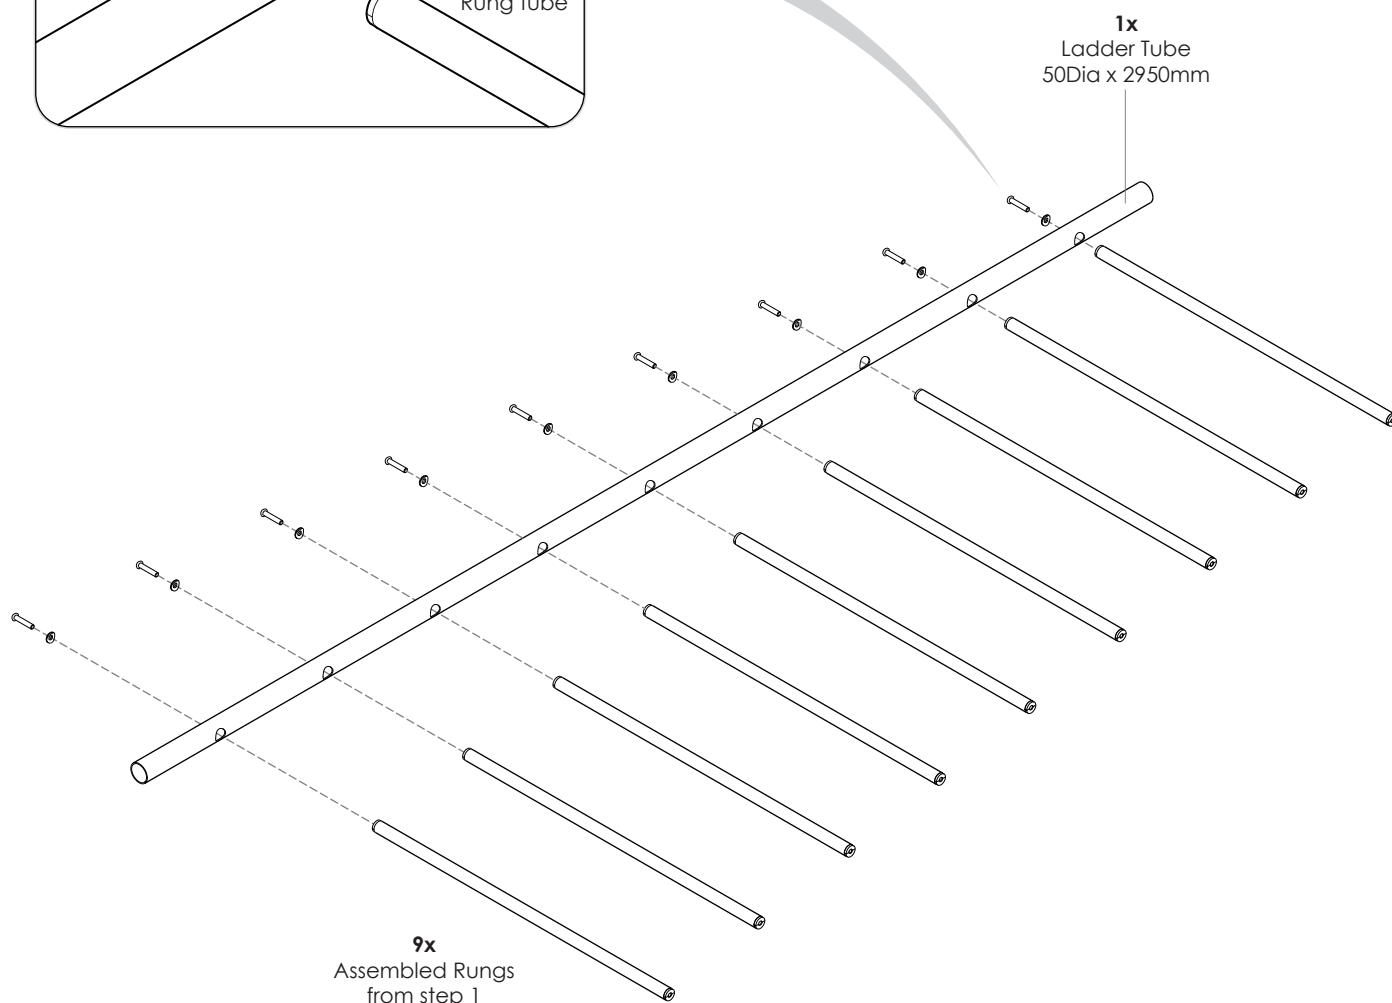


3 ATTACH SECOND LADDER TUBE

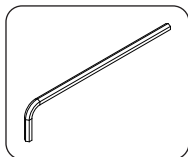



Hand tighten all bolts

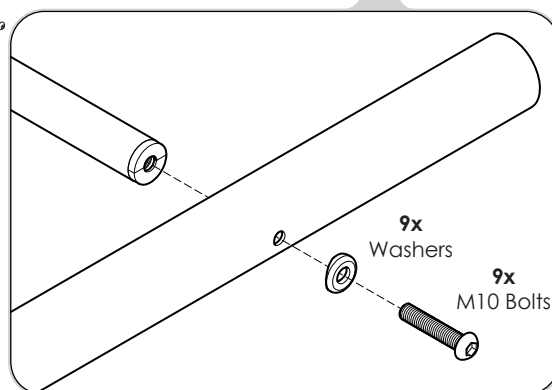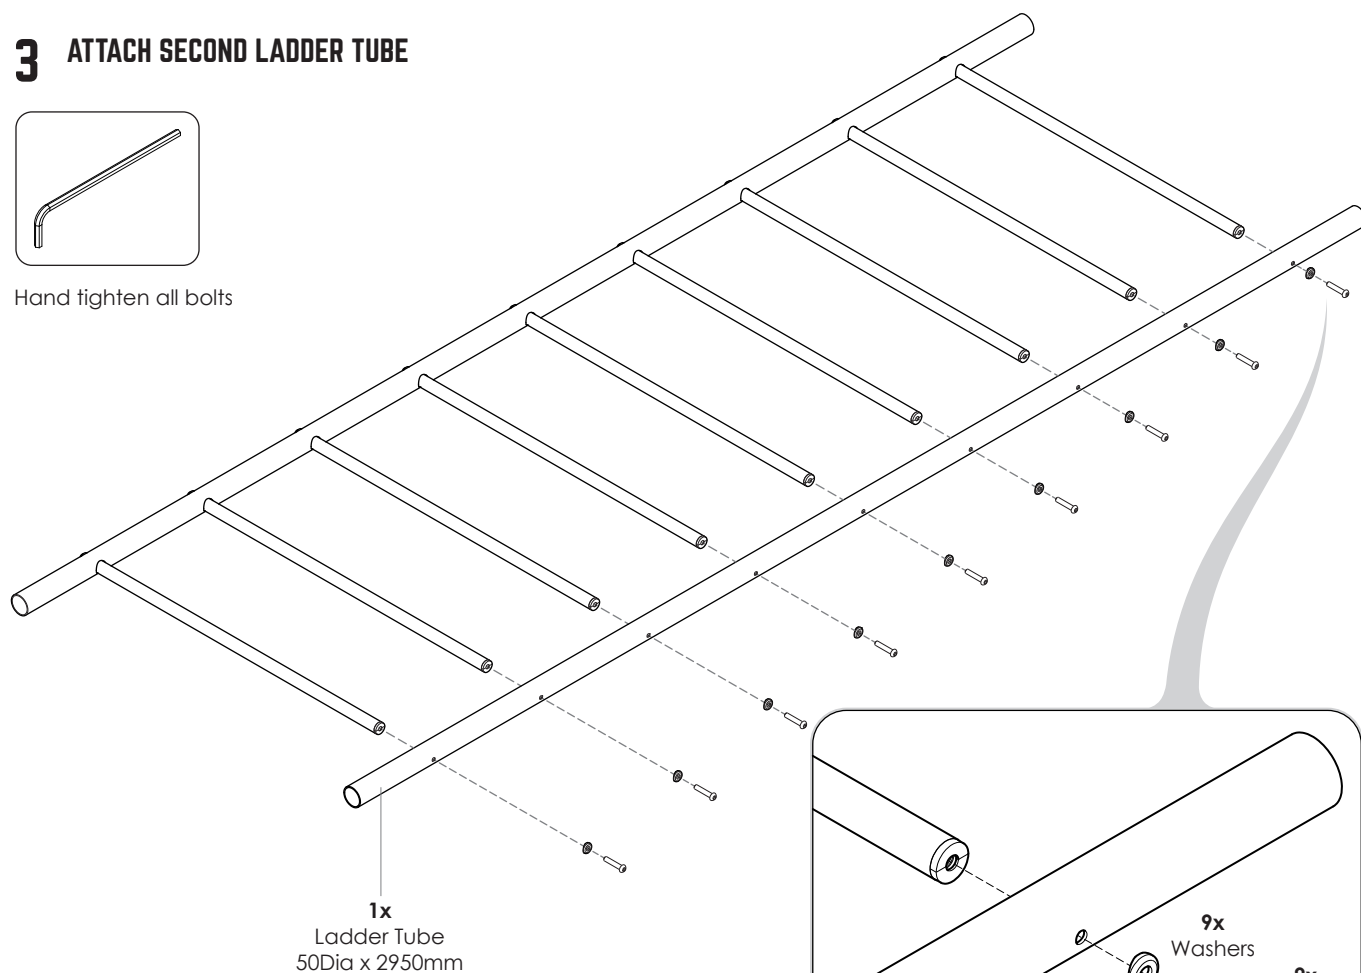



4 FIRMLY TIGHTEN ALL RUNG BOLTS.

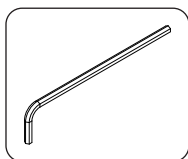


See page 5 for correct tightening method.

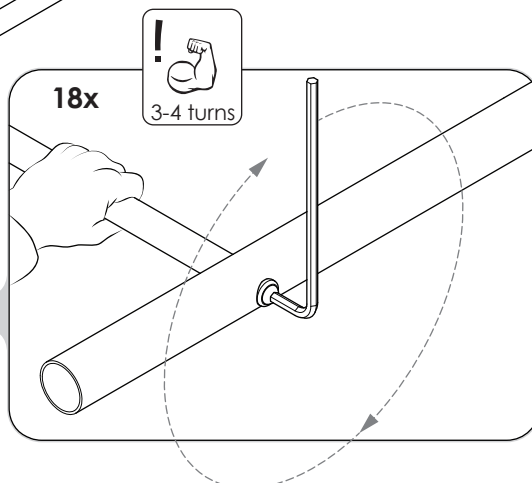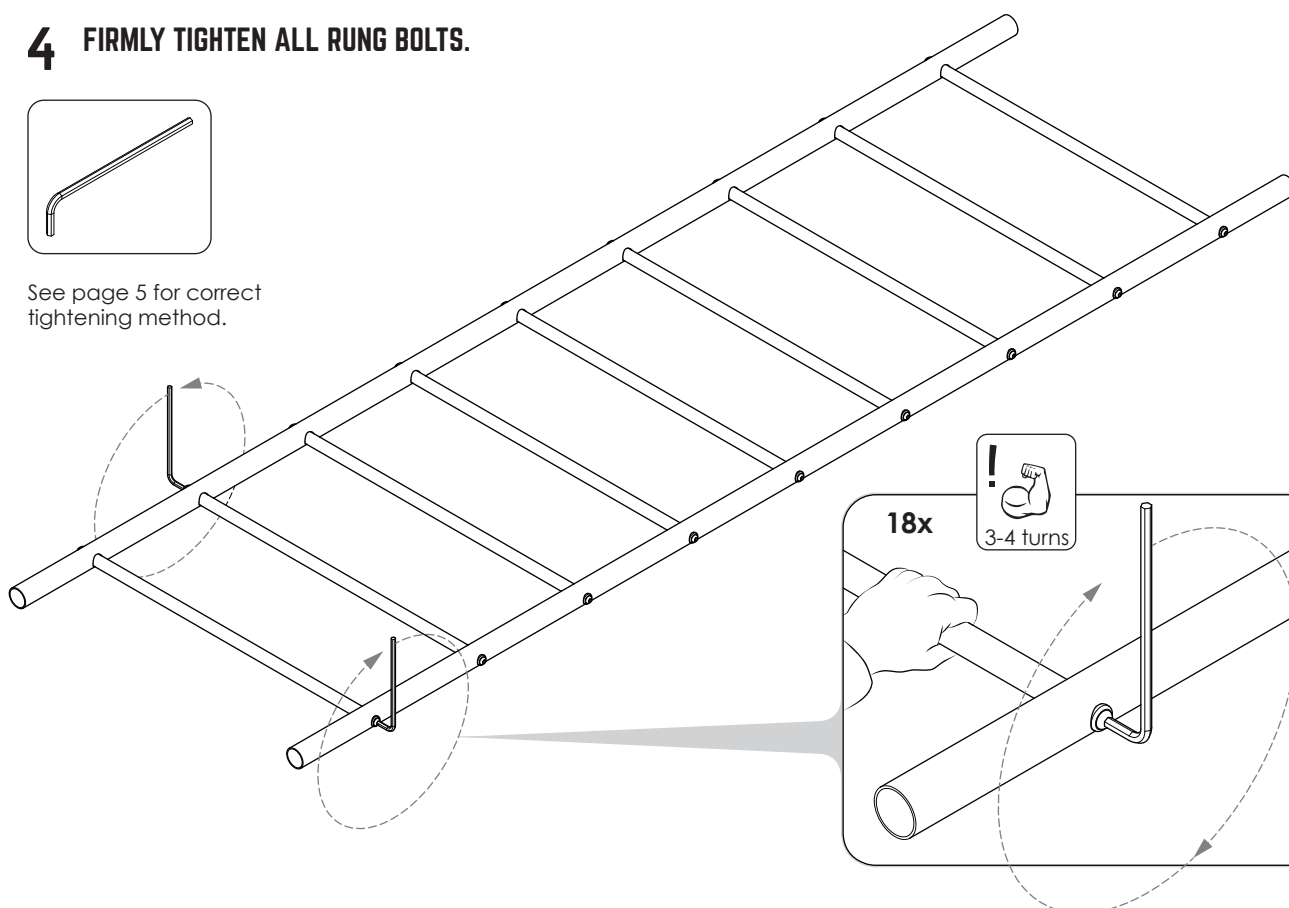


5 LEG ASSEMBLY x 2

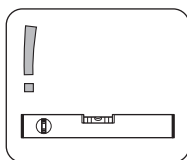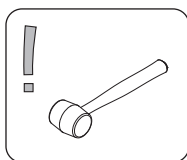

Insert plastic end caps into leg tubes.


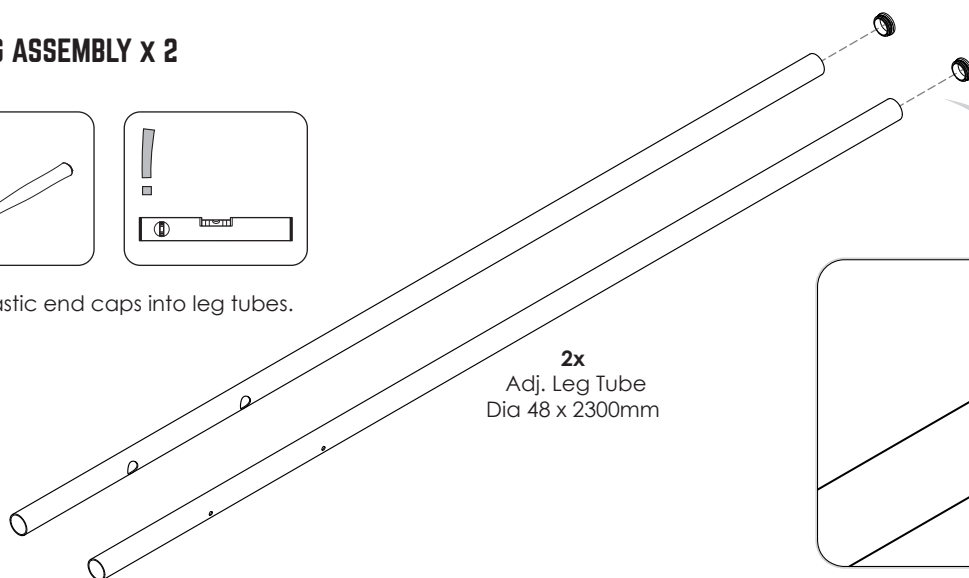


2x
Adj. Leg Tube
Dia 48 x 2300mm

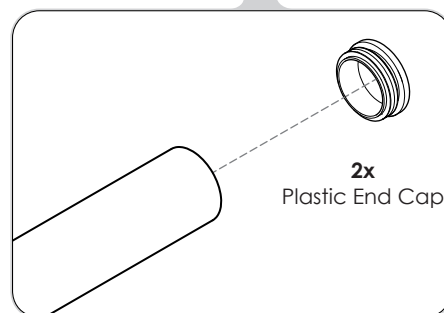


2x
Plastic End Cap

6 INSERT RUNGS

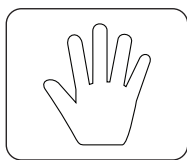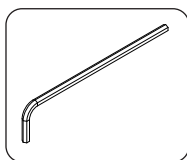


Hand tighten all bolts.

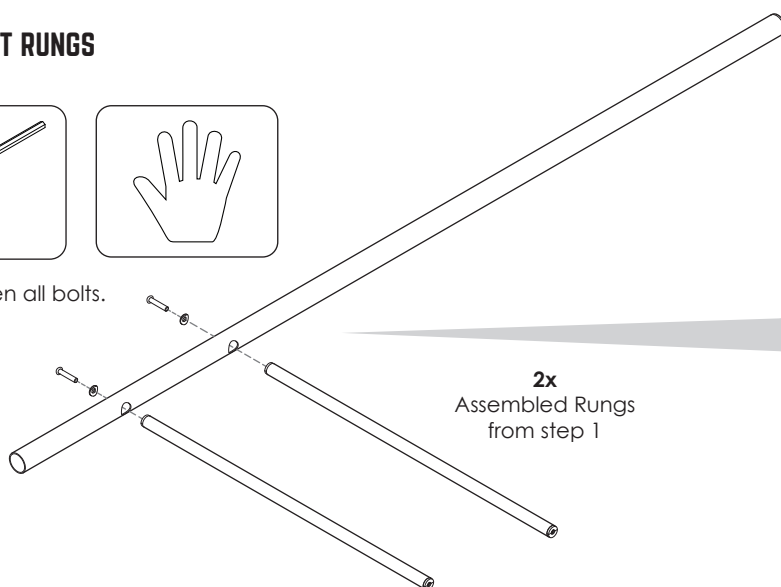


2x
Assembled Rungs
from step 1



2x M10 Bolts
2x Washers

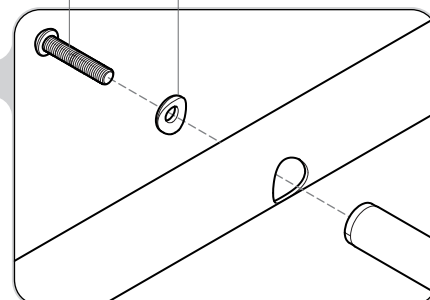


7 ATTACH SECOND LEG

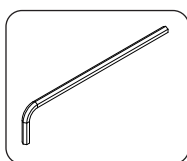


Hand tighten all bolts.

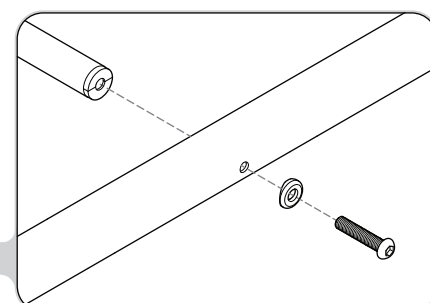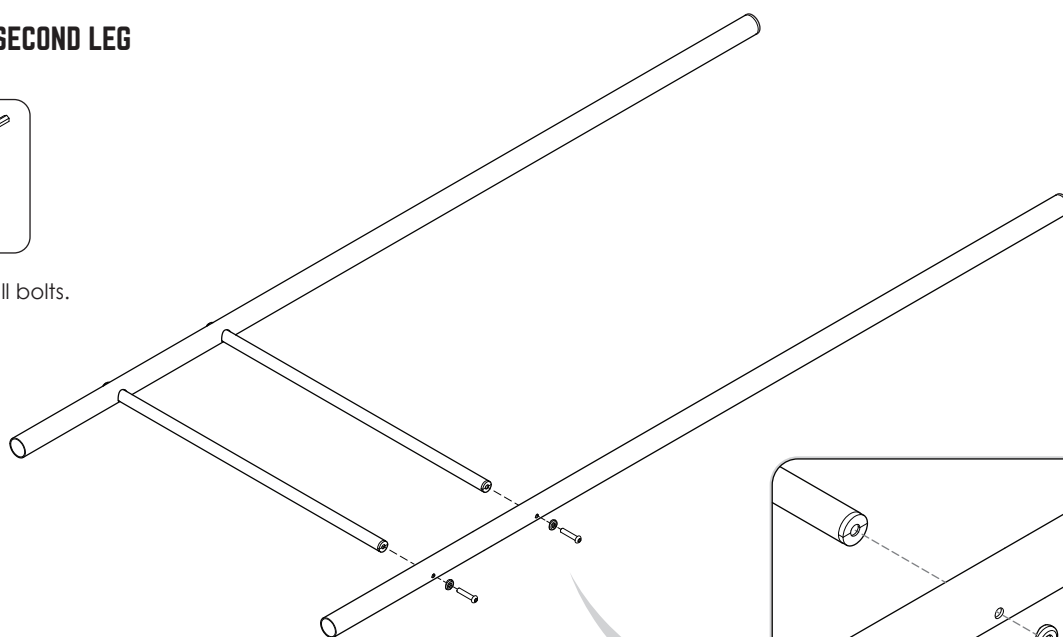


8 ATTACH BASE PLATES AND 1X SHORT TEE (A) (CARGO NET SIDE)

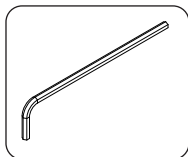


Tighten all grub screws on base plates.

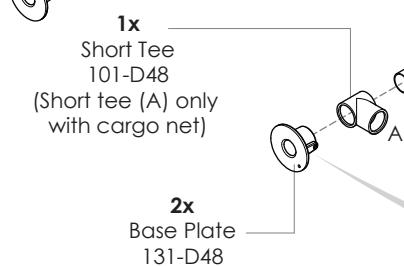



Leave short tee (A) loose.

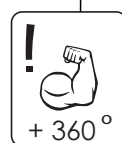


2x

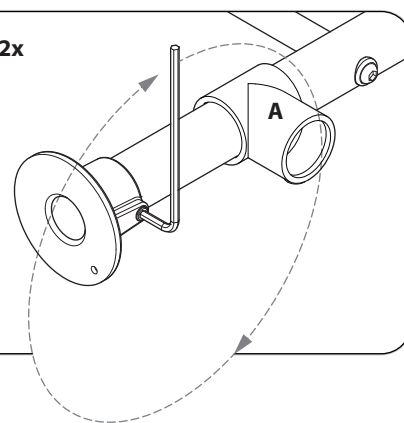


9 APPLY HEIGHT STICKERS

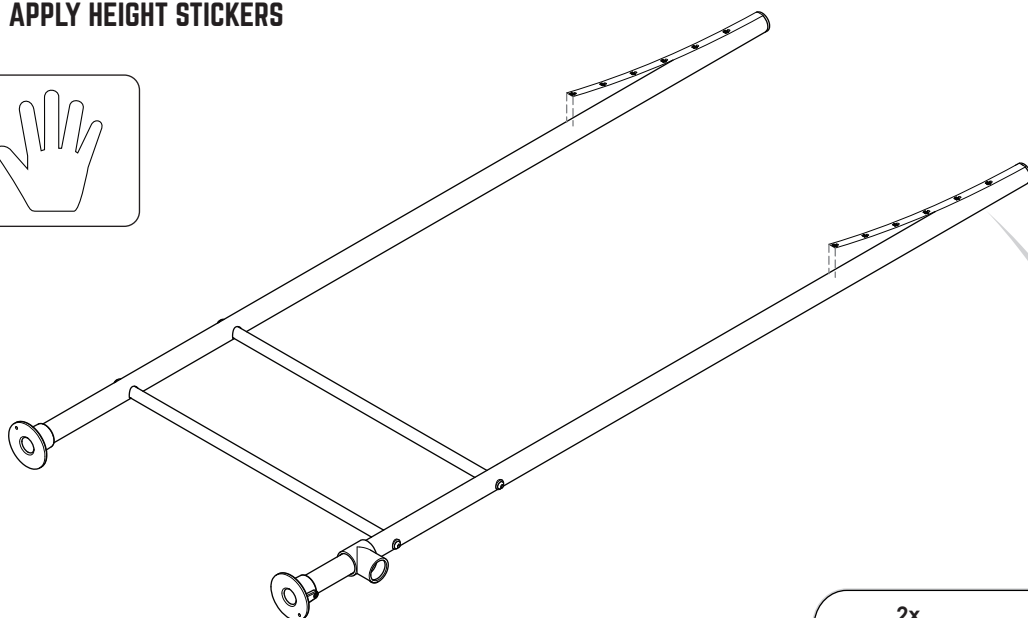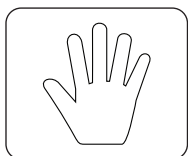


2x Height Sticker

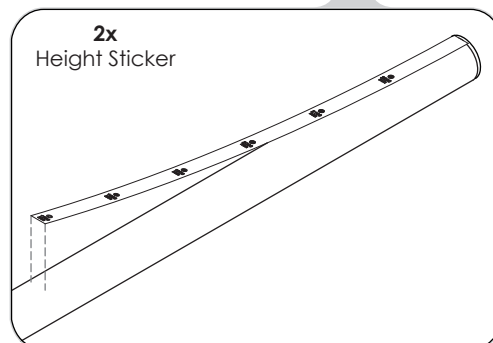


10 SET LADDER BAR HEIGHT.

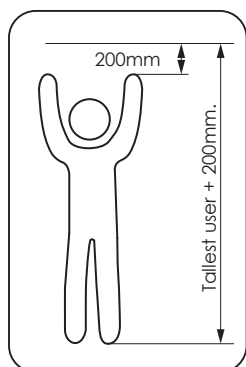


Good starting height is 100-200mm above reach.

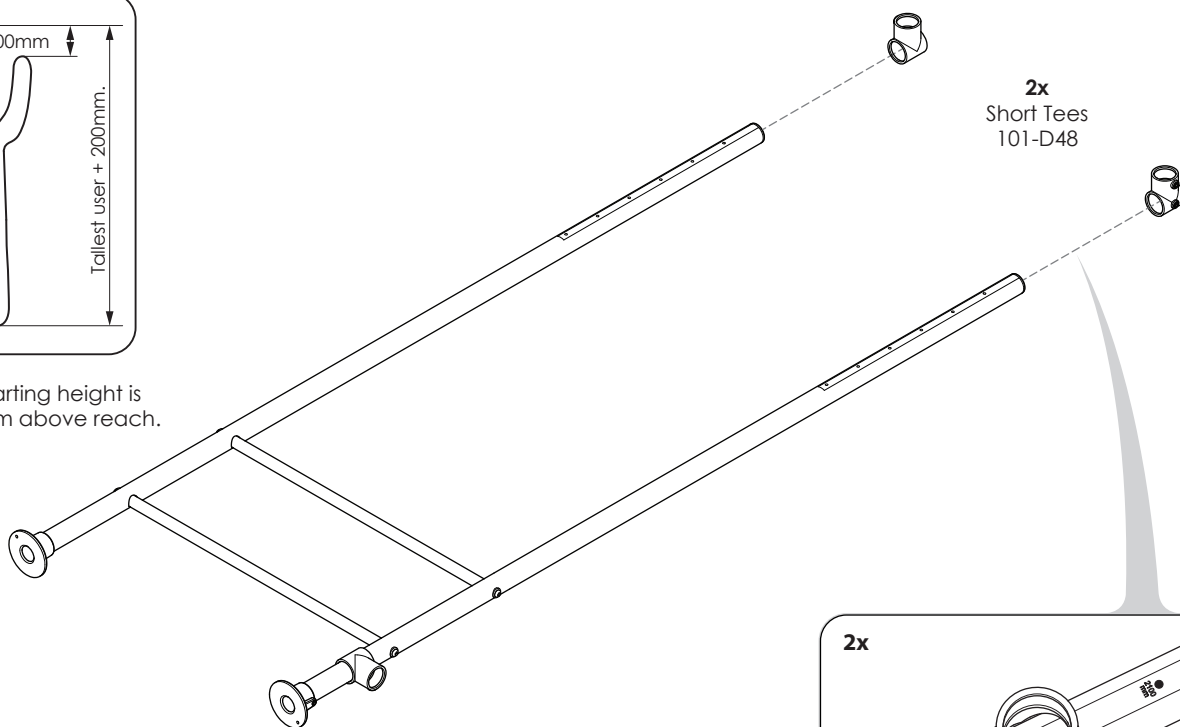


Position top short-tee at measured height.

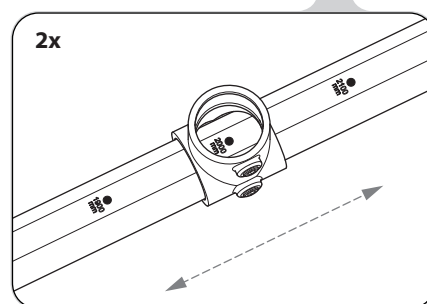



11 FIRMLY TIGHTEN ALL GRUB SCREWS AND RUNG BOLTS.

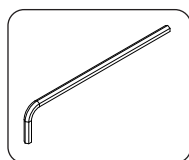

Hand tighten grub screw A. (Temporary location). Fully tighten all others.

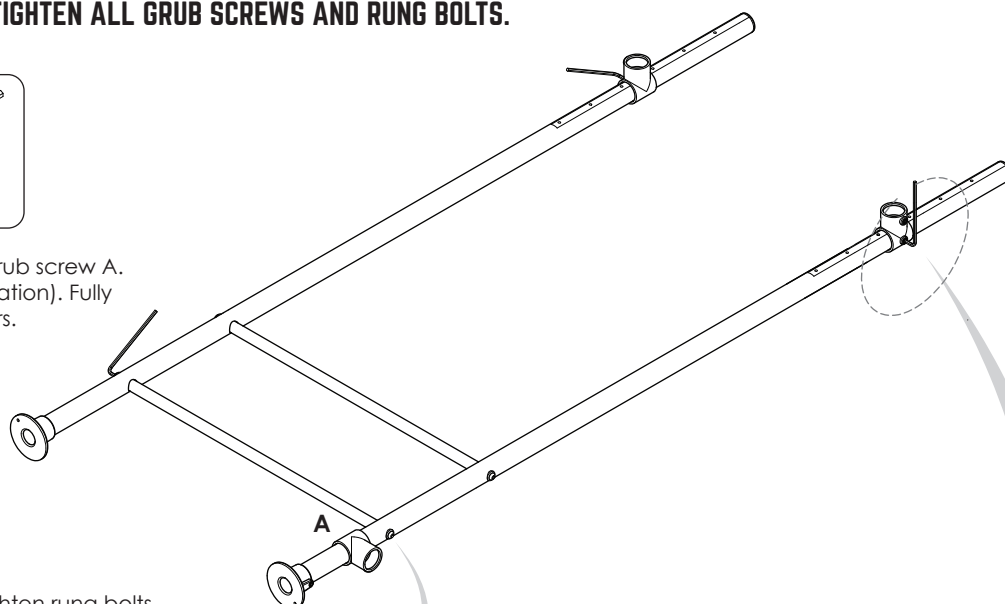


Fully Tighten rung bolts.

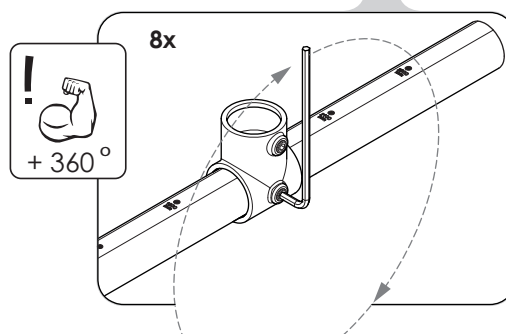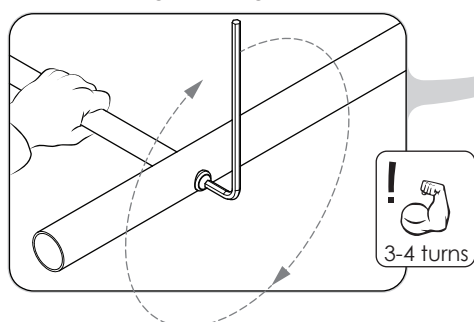


12 REPEAT STEPS 5-11 FOR 1x MORE SET OF LEGS.
SAME PROCEDURE BUT WITHOUT ADDITIONAL SHORT TEE (A).
SEE BELOW FOR DESIRED RESULT.

13 LEG ASSEMBLY x 2.

Standing up with top tees facing each other.
Check all grub screws are fully tightened
except on fitting A (hand tight only).

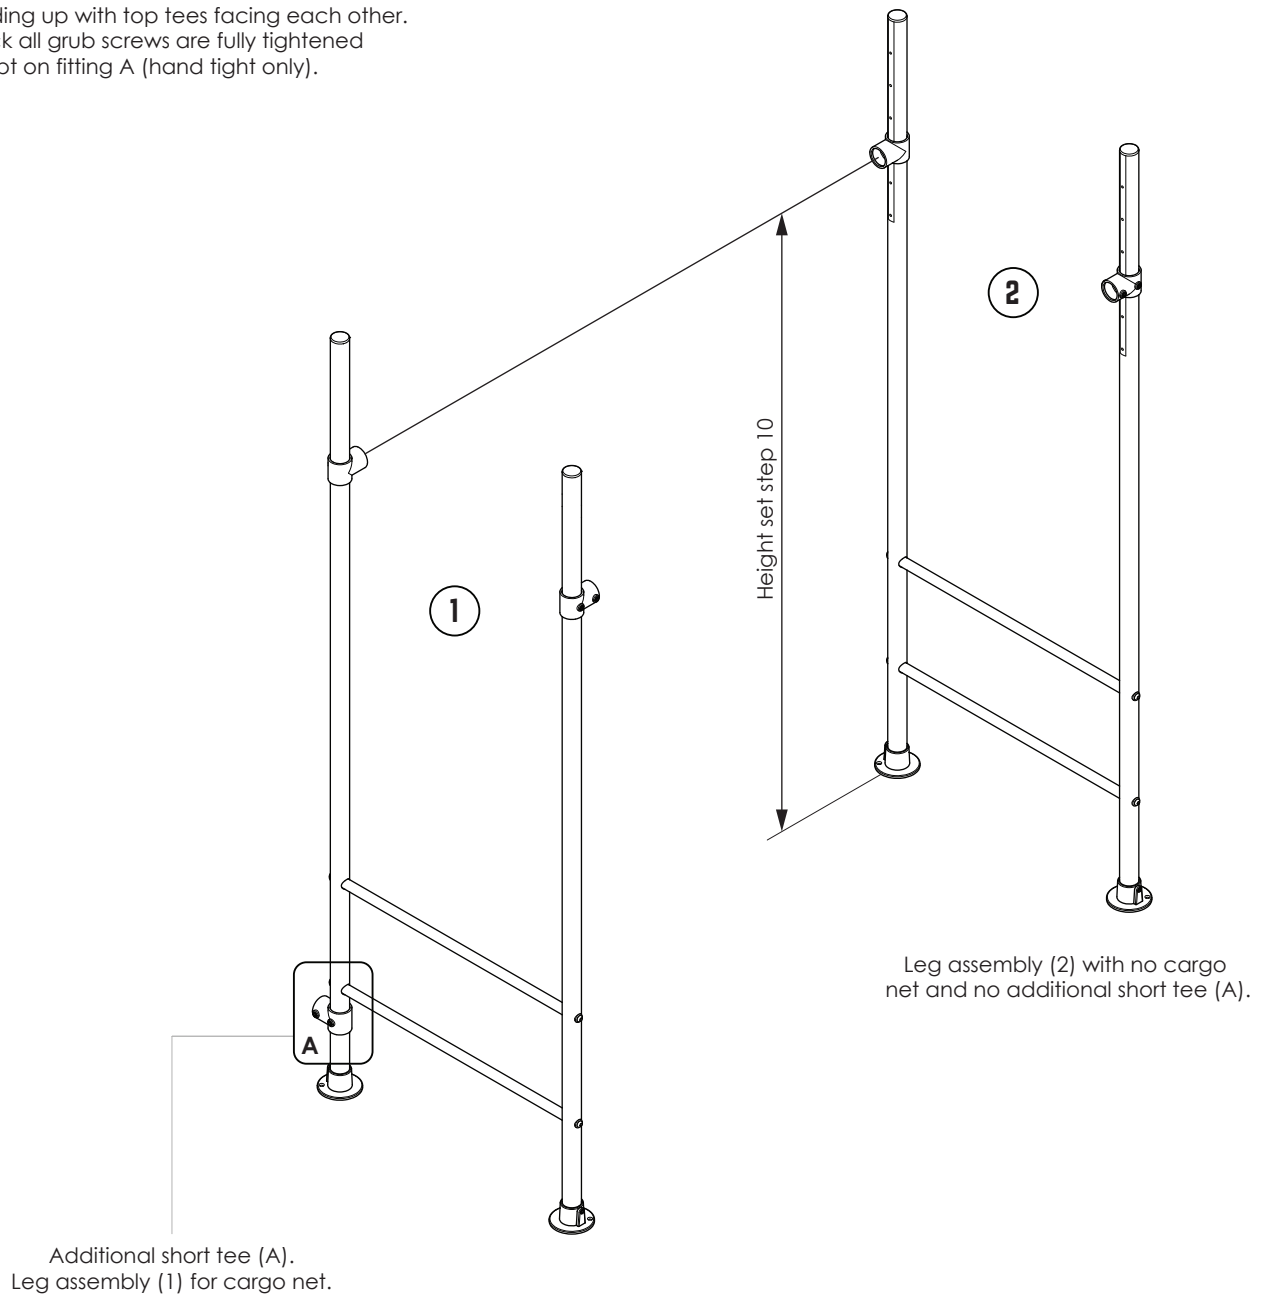


14 CHECK ALL FITTING GRUB SCREWS AND RUNG BOLTS ARE FULLY TIGHTENED


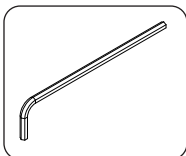


Firmly tighten all grub screws and bolts,
Leave short tee A loose.


15 FLIP LEGS 1 & 2 OVER

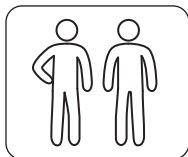


For the following step the legs should be flipped over & attached one at a time.

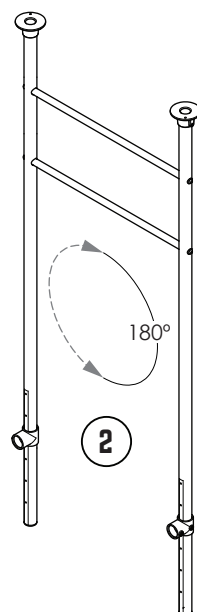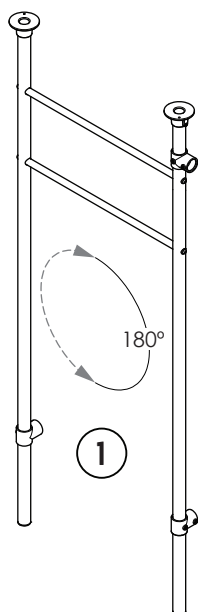





16 ATTACH 2X LEGS TO LADDER

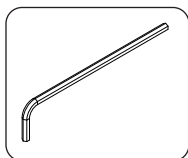

1. Attach first set of legs ① - tighten all grub screws.
2. Attach second set of legs ② - tighten all grub screws.

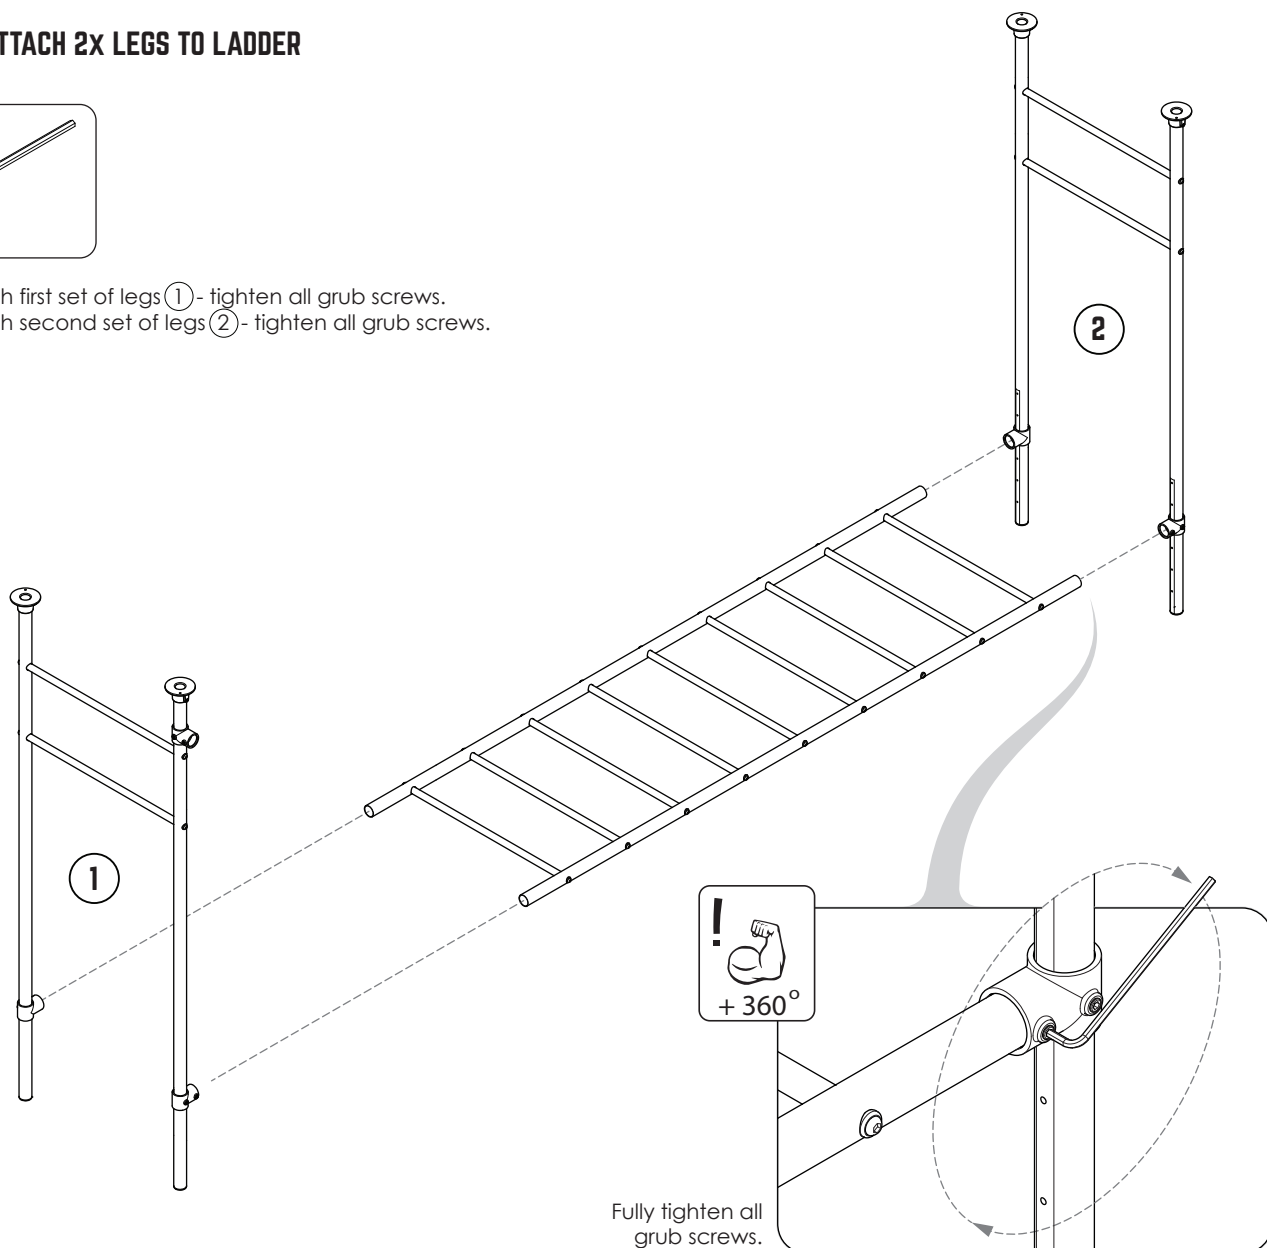


17 FLIP ASSEMBLY OVER

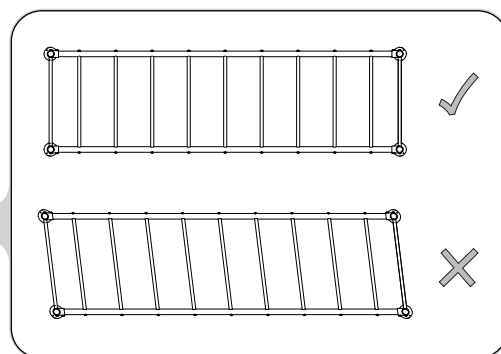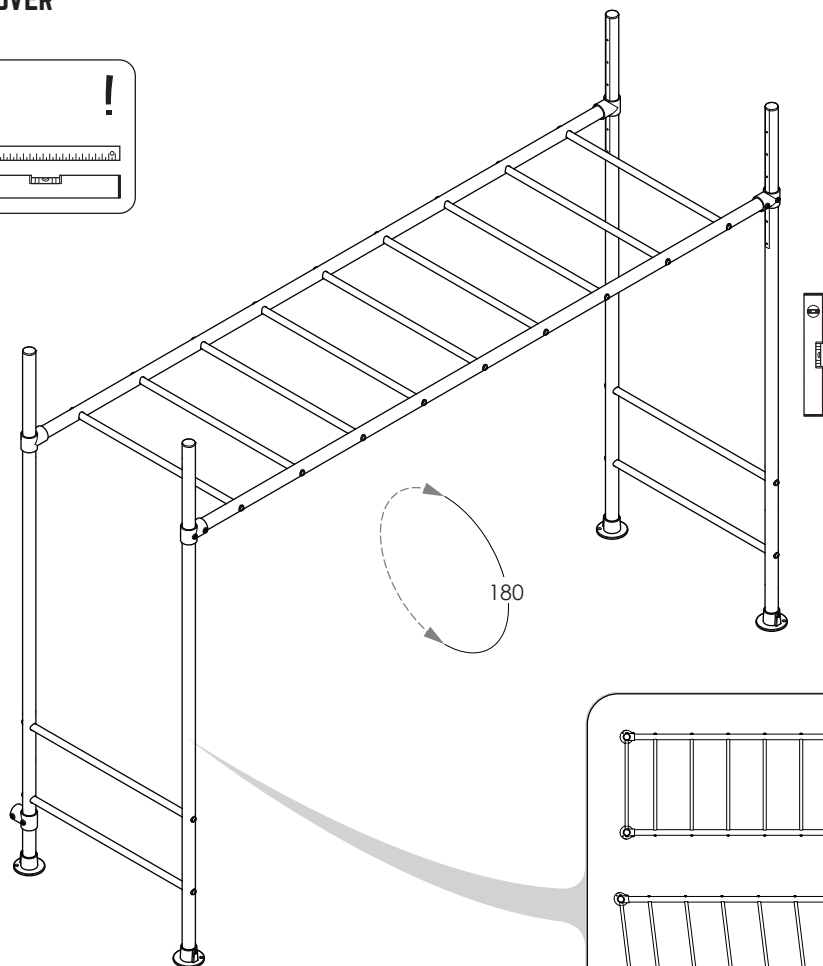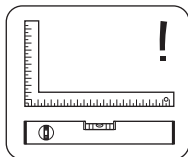
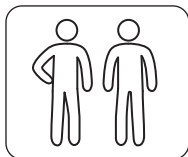


**CRITICAL : ENSURE YOUR FRAME IS 100% SQUARE AND LEVEL (AS PER PAGE 4)
BEFORE MOVING ONTO THE REST OF THE ASSEMBLY**


18 SECURE TO GROUND

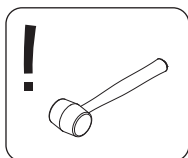



Select suitable location.
Hammer in pegs x4.

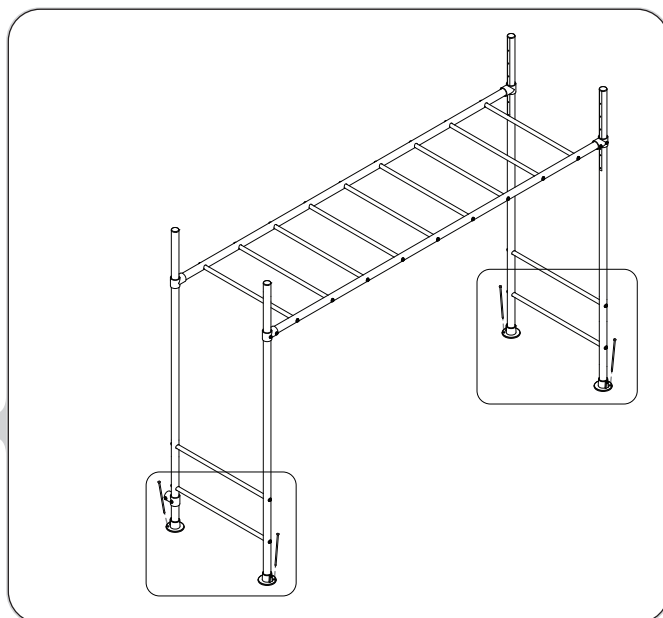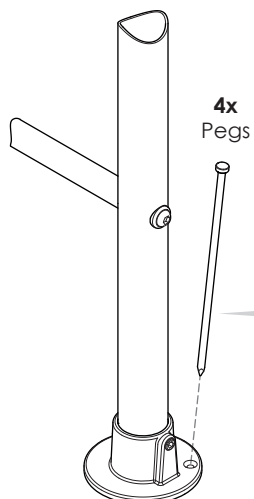



19 SWING BAR ASSEMBLY x2.

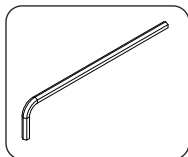

Slide on all fittings. Leave short tees and swing hooks hand tight only for assembly adjustment later, see below for spacing.

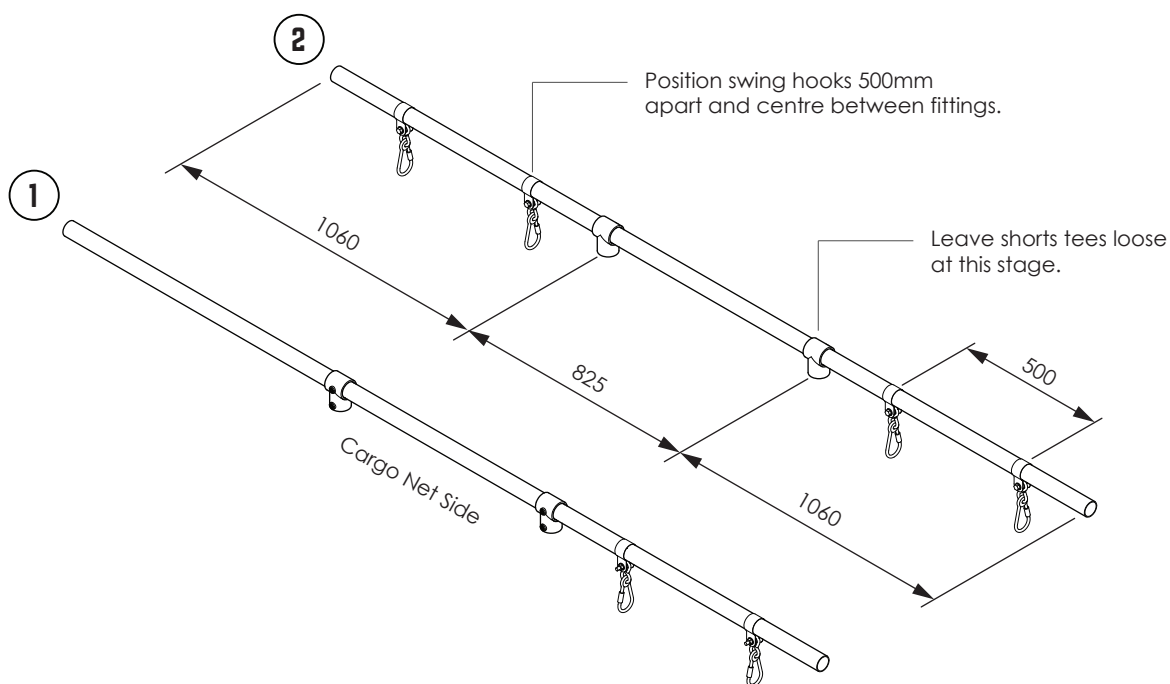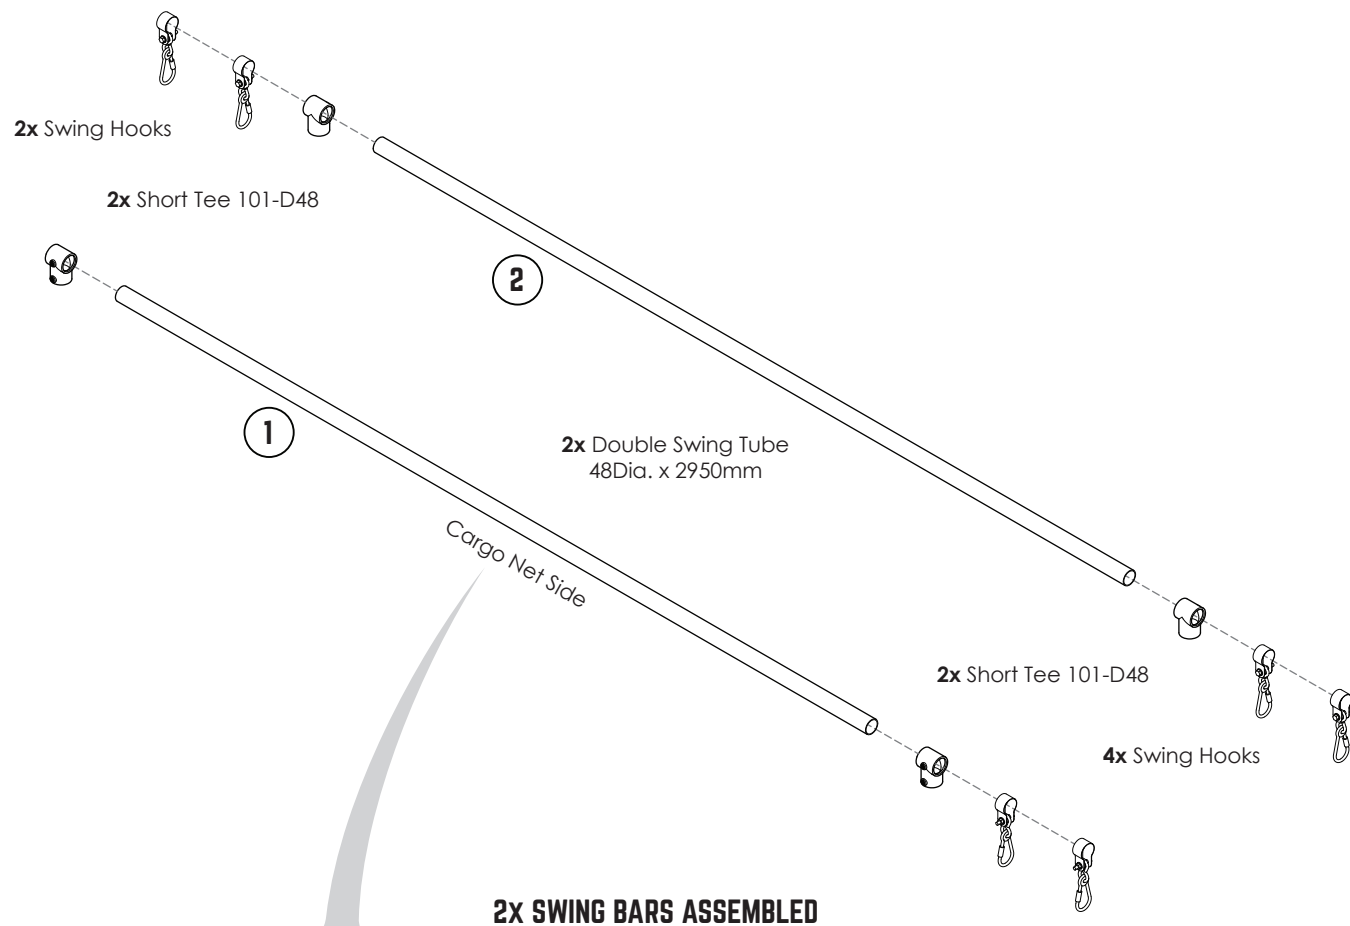


20 ATTACH 2x SWING BAR ASSEMBLY.

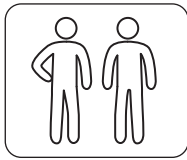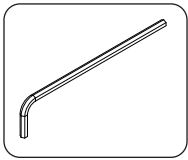


Attach the short tees (on the swing bars) to the main monkey bar ladder legs. Fully tighten all grub screws.

Fully tighten all grub screws.

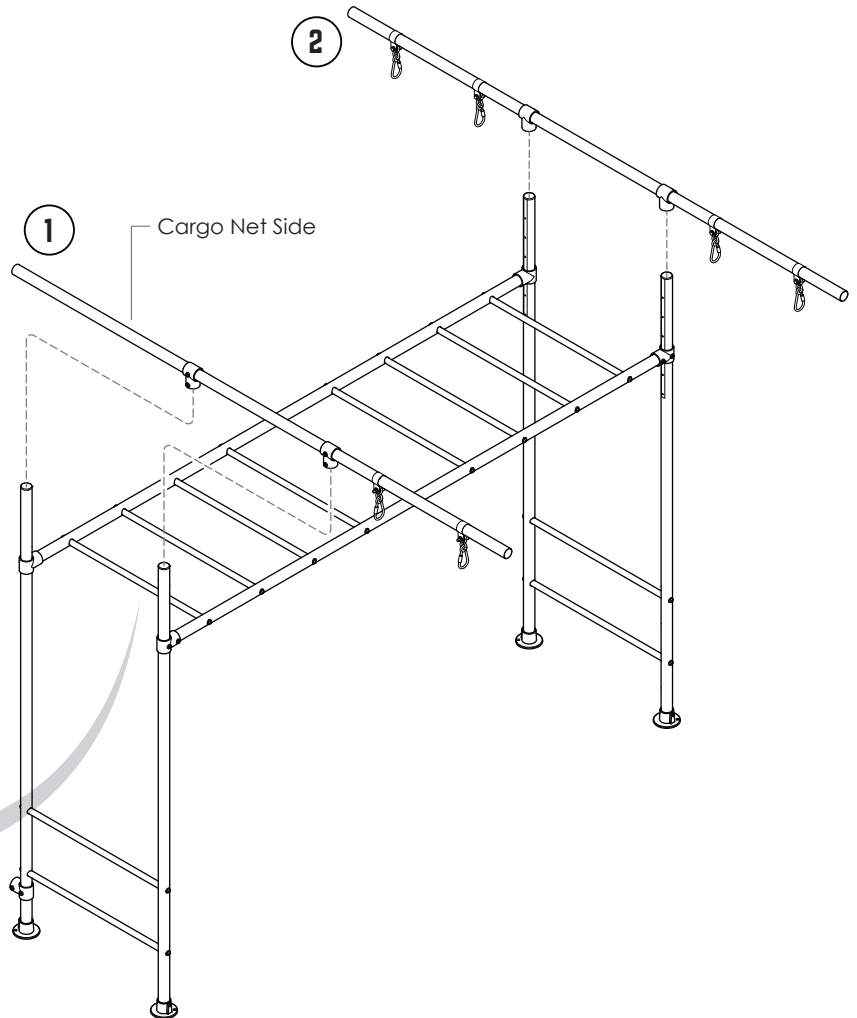


21 ASSEMBLE SWING BAR LEGS x2

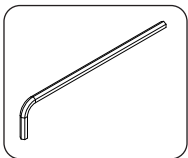

On flat level ground slide on all fittings.



Firmly tighten base plate grub screws, lightly tighten the short tees and swivel braces for later adjustment.

Slide swivel braces onto lowered legs ensuring the grub screws are facing the base plate, leave hand tight for later adjustment.


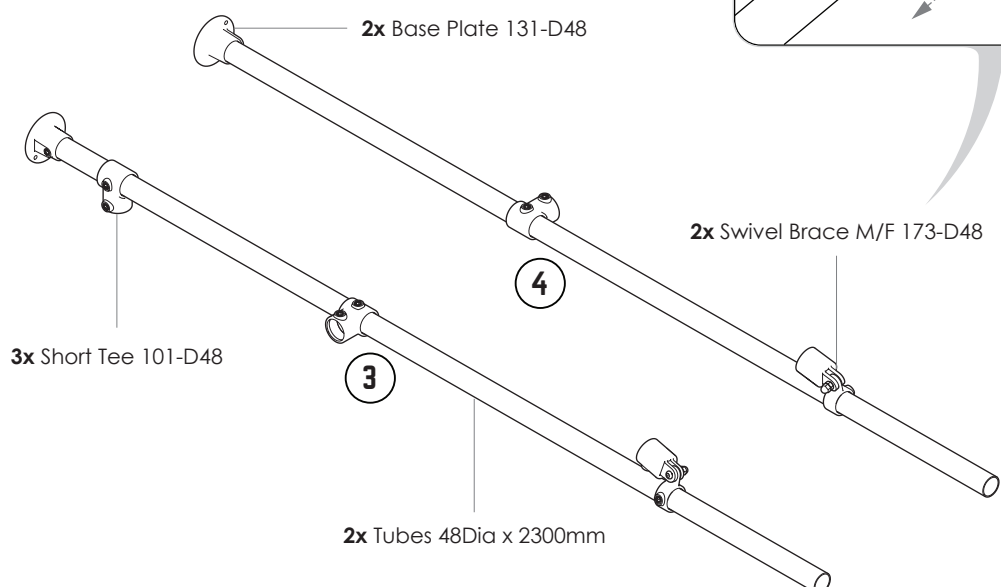


Grub screw facing downwards.


22 ASSEMBLE EXTENSION TUBES & TIGHTEN

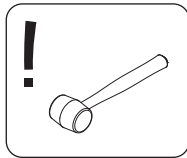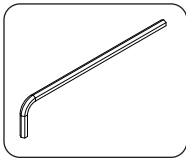



1. Tap end caps into extension tube ends.
2. Insert extension tubes half way into extra long tees and fully tighten all grub screws.

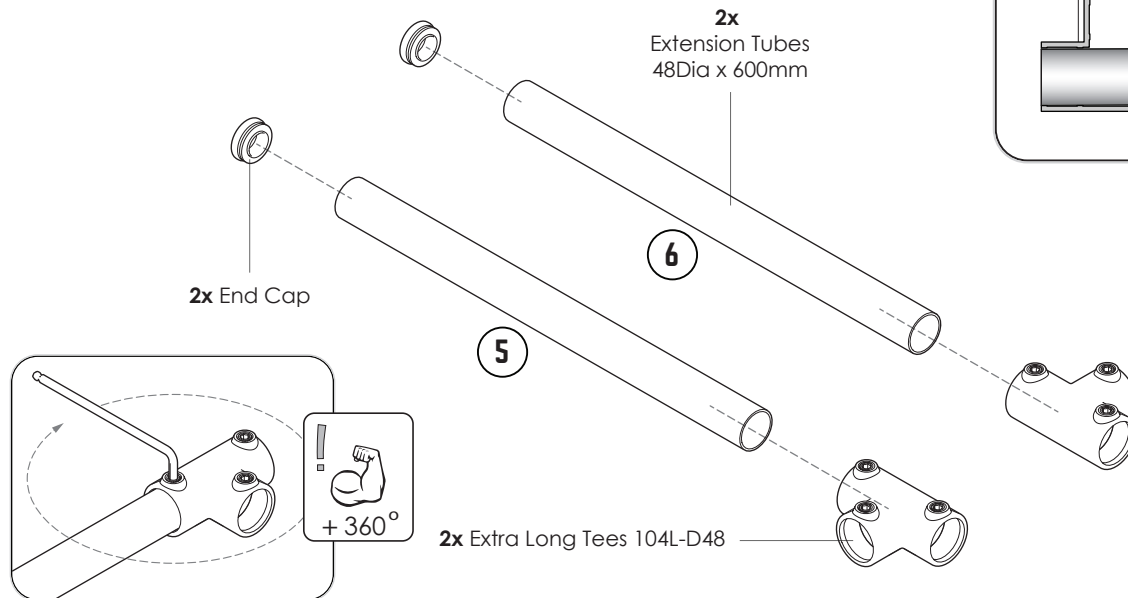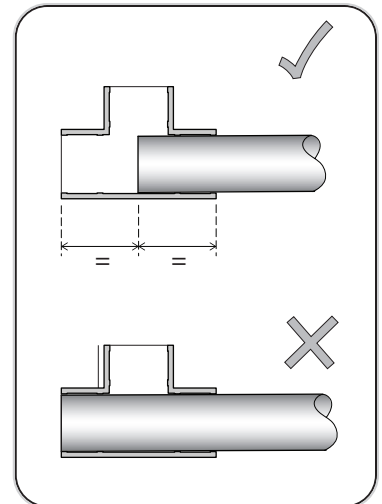


23 CONNECT EXTENSION TUBES TO EXISTING LEGS x2

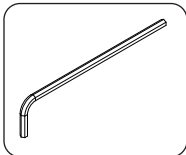


Attach extension tube. Ensure inserted leg (3&4) hits extension tube (5&6). Firmly tighten grub screws.

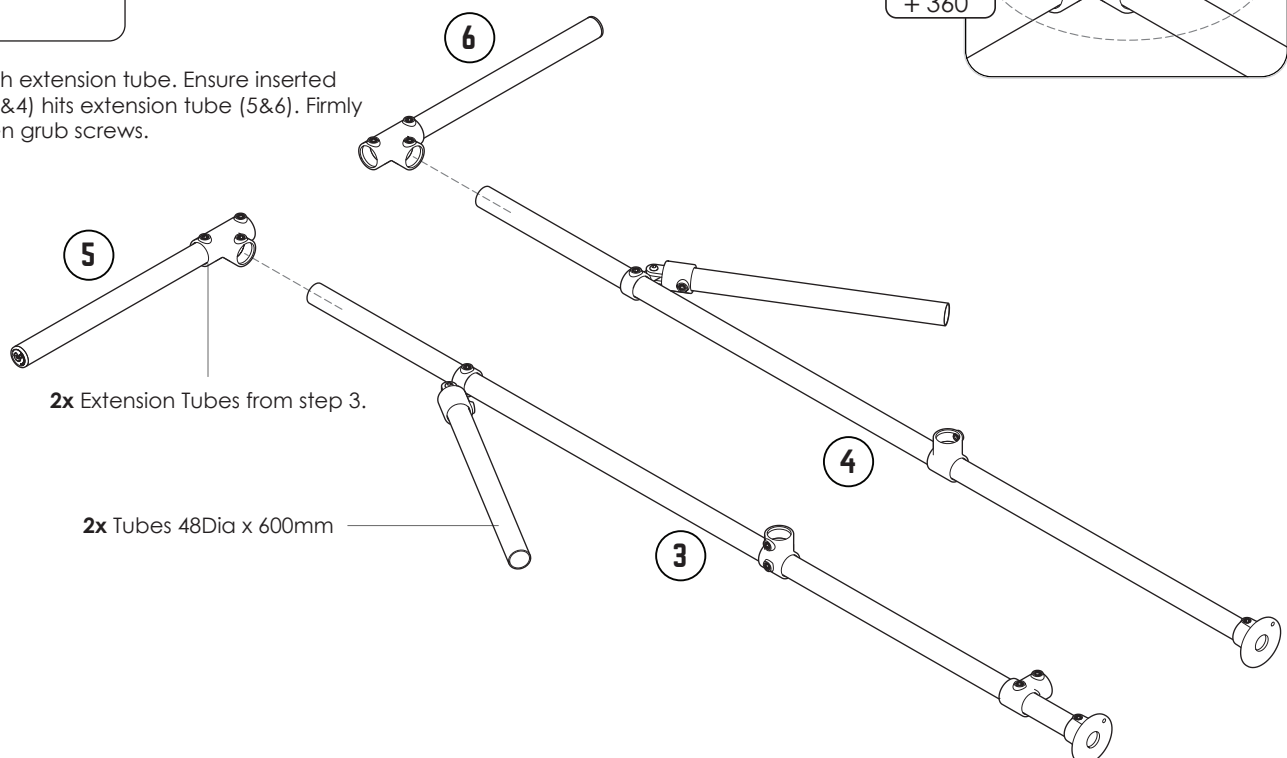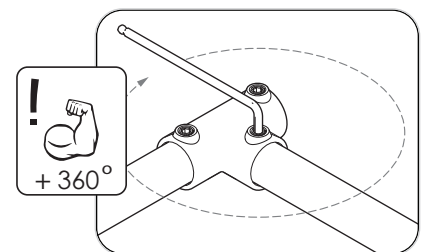


24 ASSEMBLE FLYING FOX TUBE

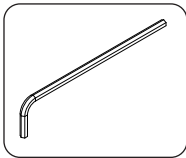


Assemble the Flying Fox Tube as illustrated below. Keep the Swivel Braces hand tight for later adjustment

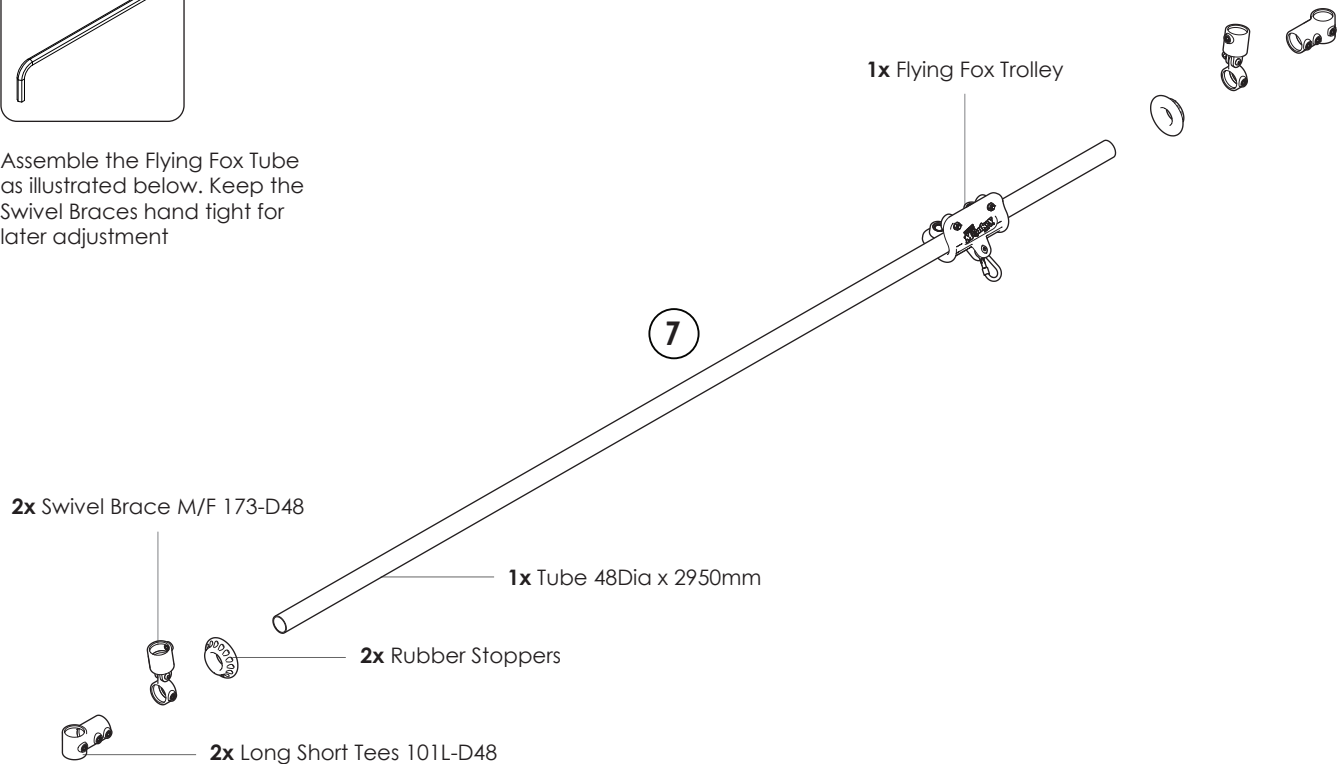



25 CONNECT EXTENSION TUBES AND LEGS TO FLYING FOX

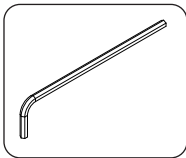


Attach the extension tubes and legs from step 23. Firmly tighten grub screws.

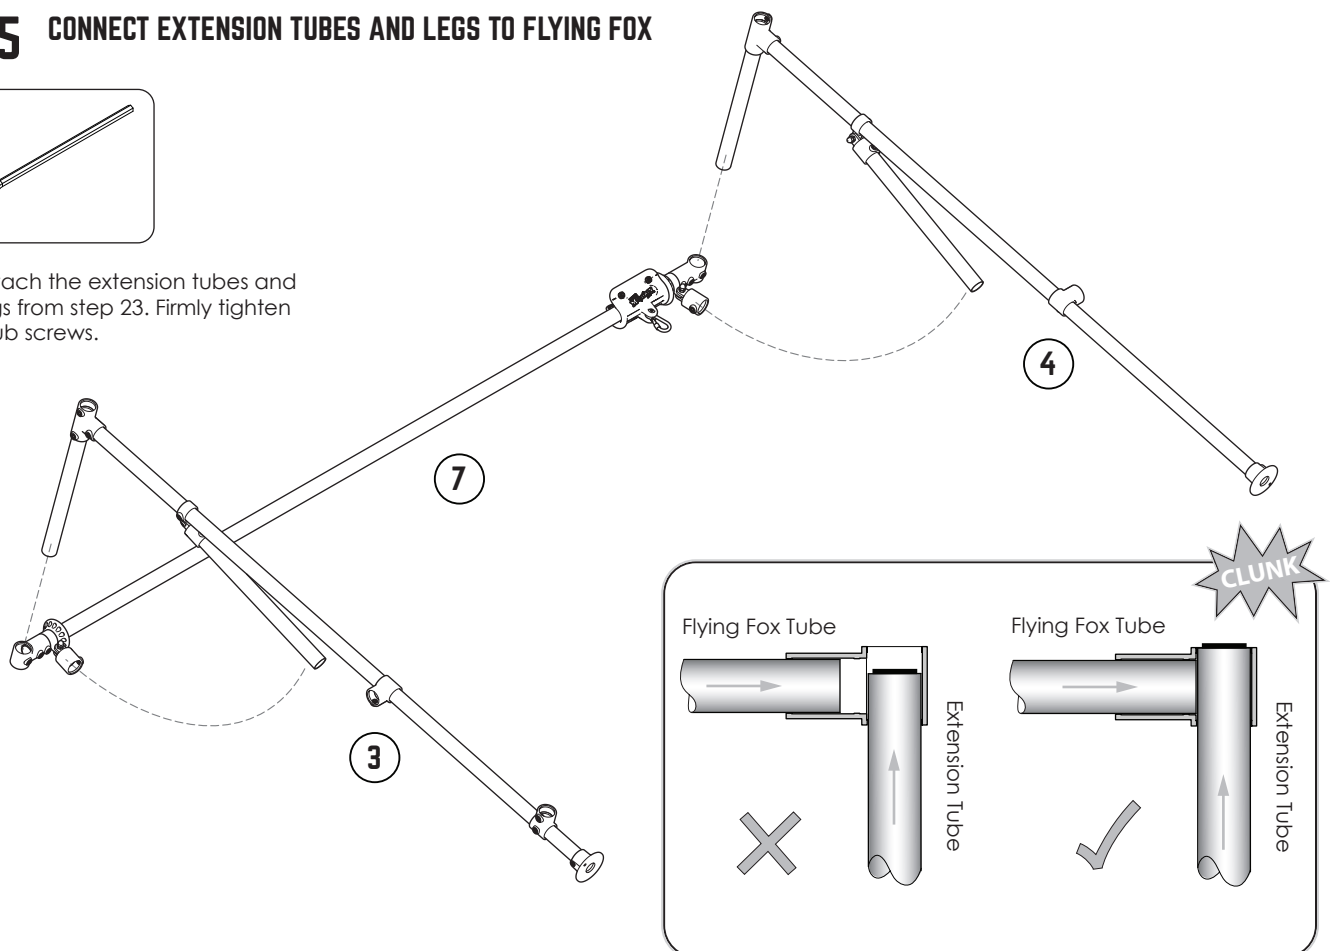

26 ATTACH FLYING FOX TO FRAME

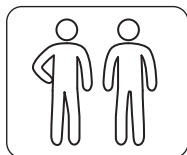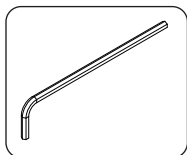


Assemble the parts as illustrated below. Use two people to secure the Flying Fox into position. Firmly tighten all grub screws.

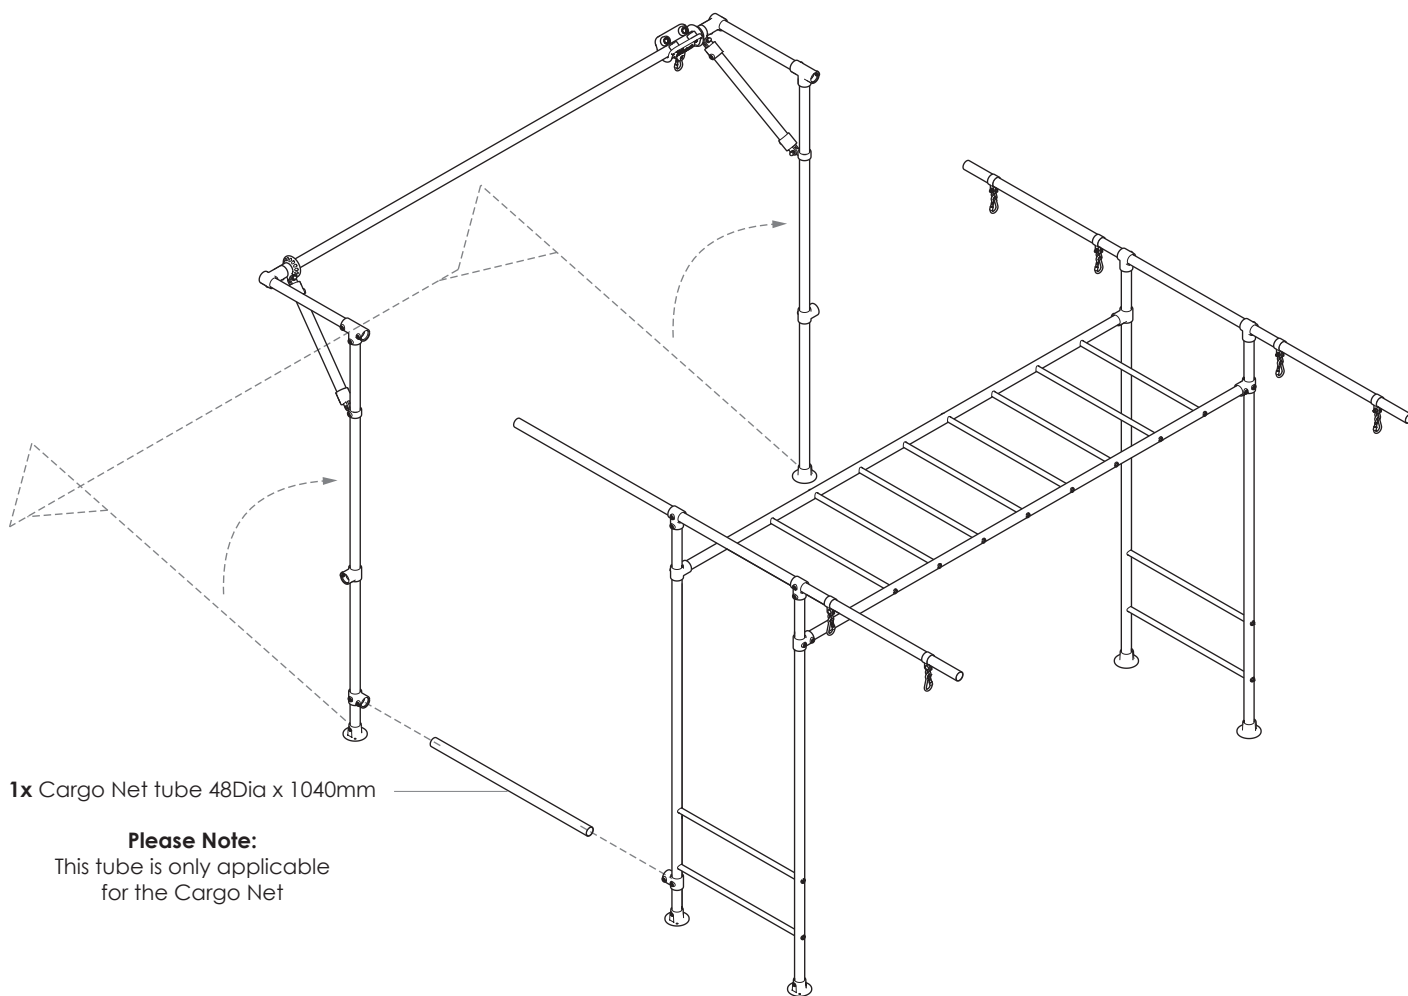


1x Cargo Net tube 48Dia x 1040mm

Please Note:

This tube is only applicable for the Cargo Net

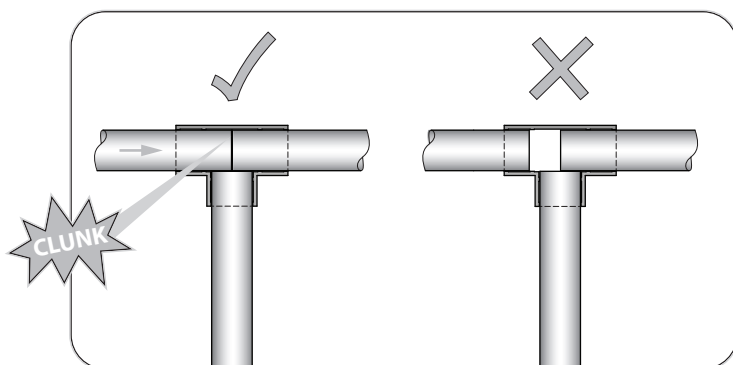


Ensure swing bar is fully engaged into the long tee.


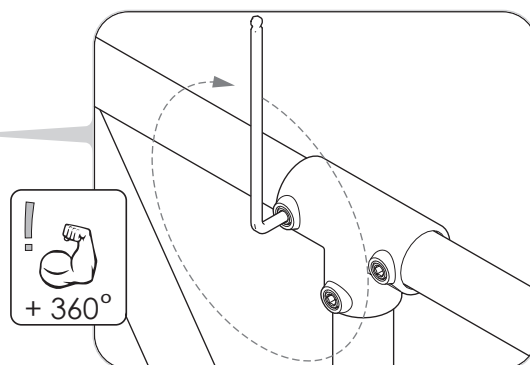


Fully tighten the long tee grub screws both ends.


27 ASSEMBLE CLUBHOUSE LEGS

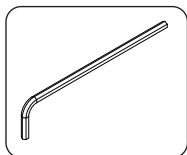


Assemble the parts as illustrated below. Keep the Short Tees and Corner Through fittings hand tight for later adjustment.

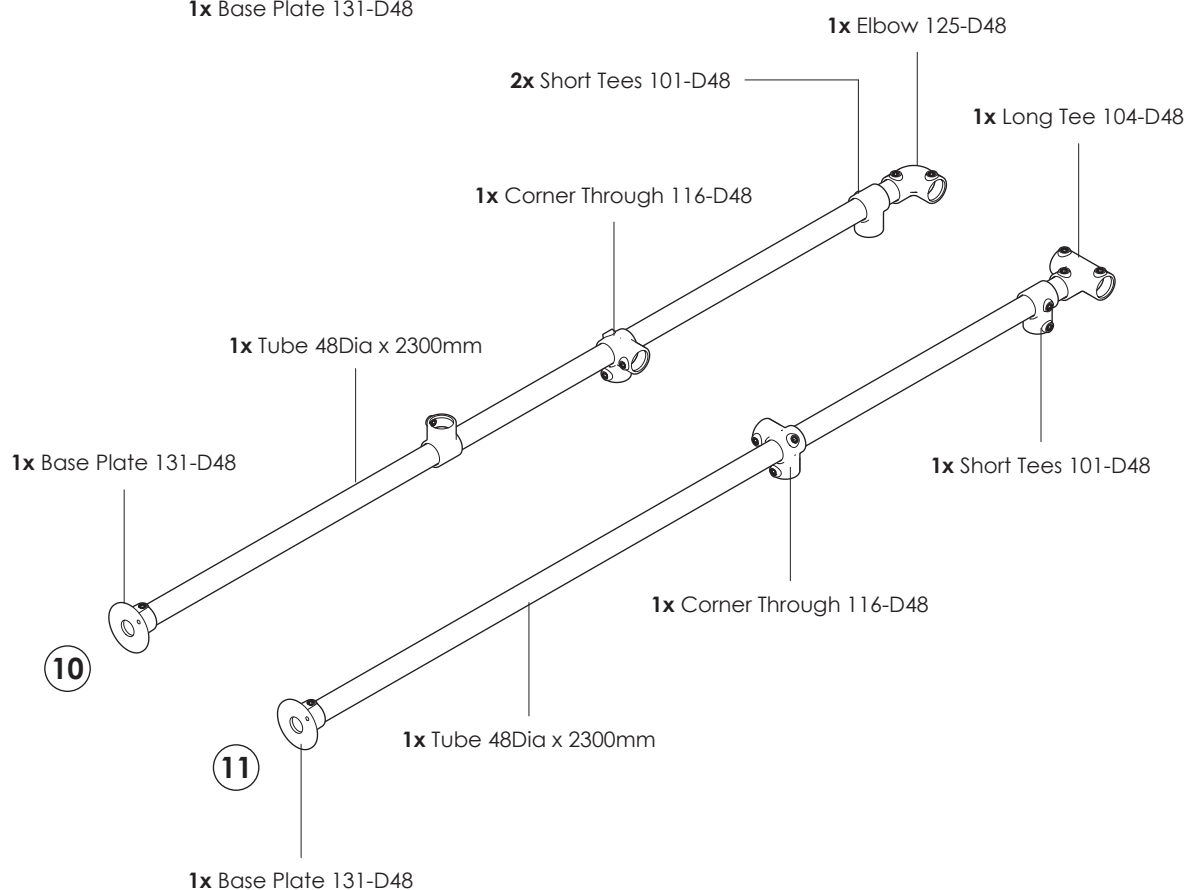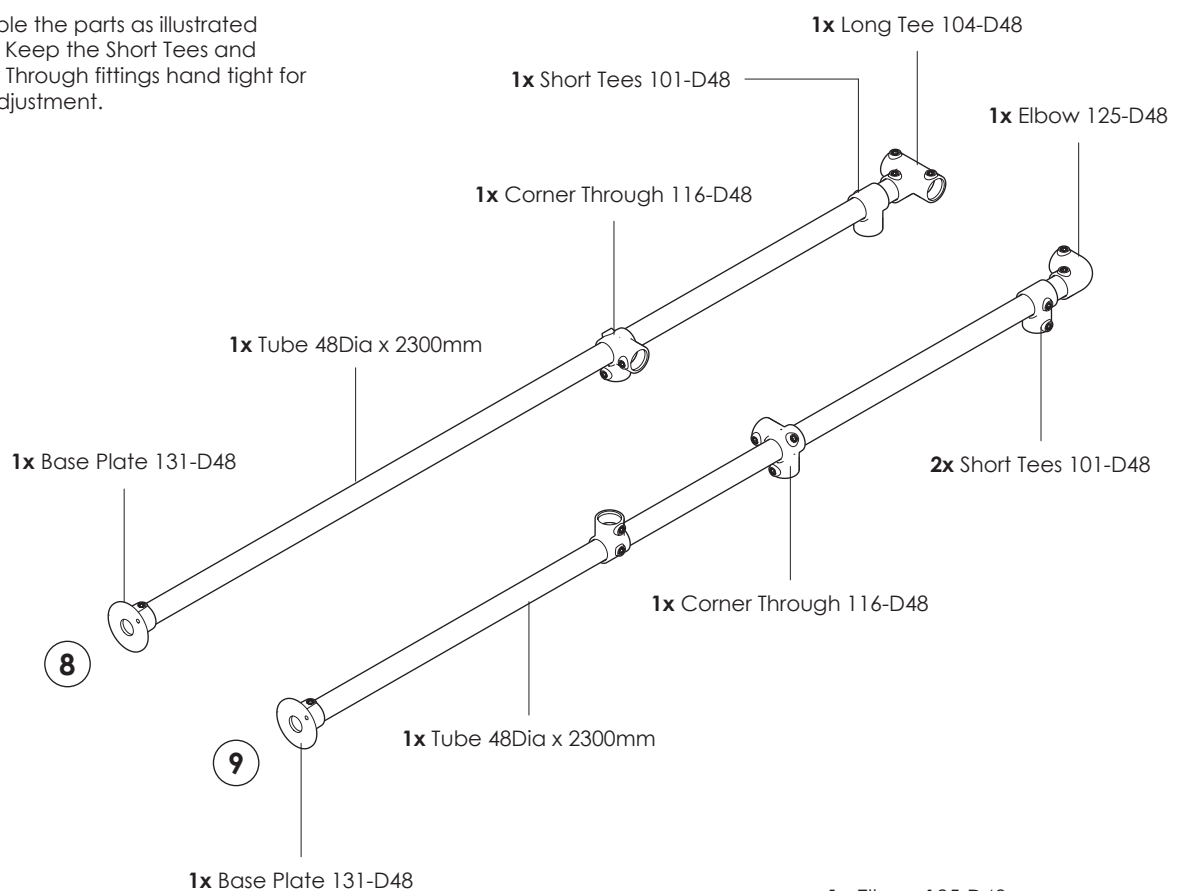


28 ASSEMBLE CLUBHOUSE TUBES

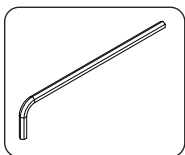


Assemble the parts as illustrated below. Keep the Short Tees and One Hole Brackets hand tight for later adjustment.

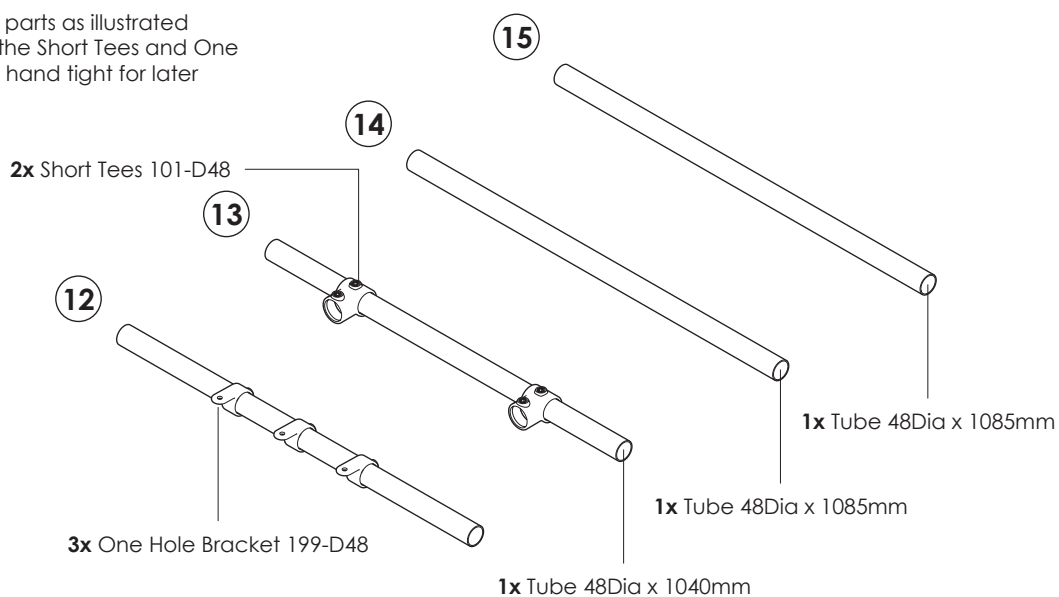


29 ASSEMBLE CLUBHOUSE FRAME SECTION

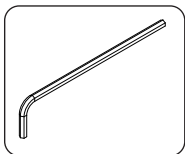



Assemble the parts as illustrated below.

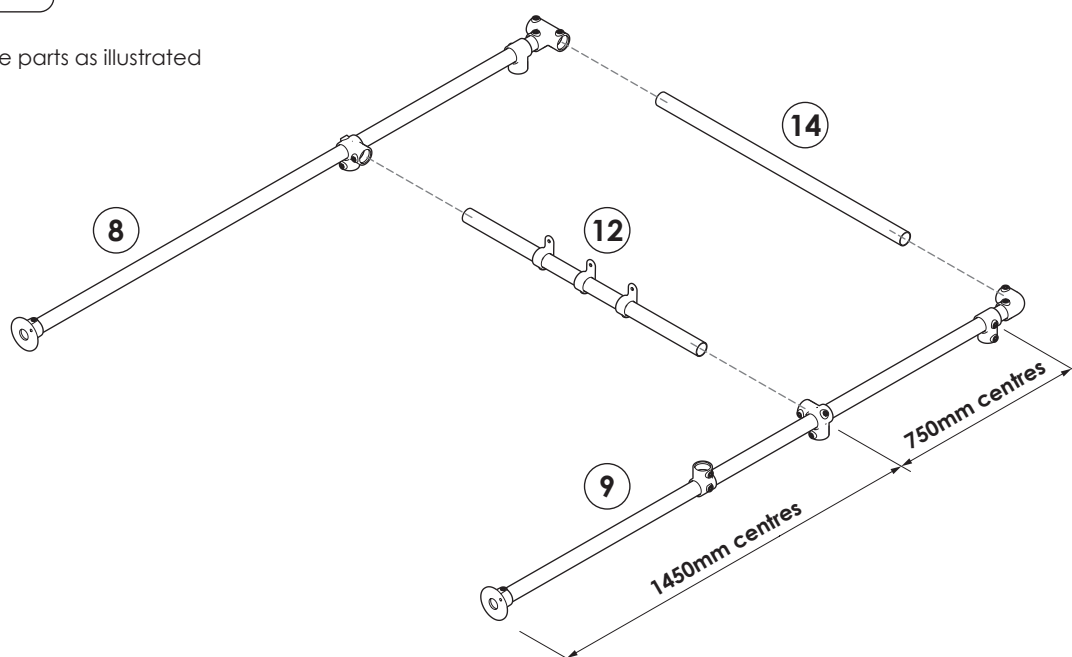


30 ATTACH CLUBHOUSE FRAME

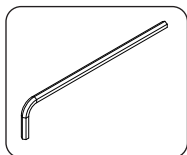

Attach the clubhouse frame section as illustrated below.

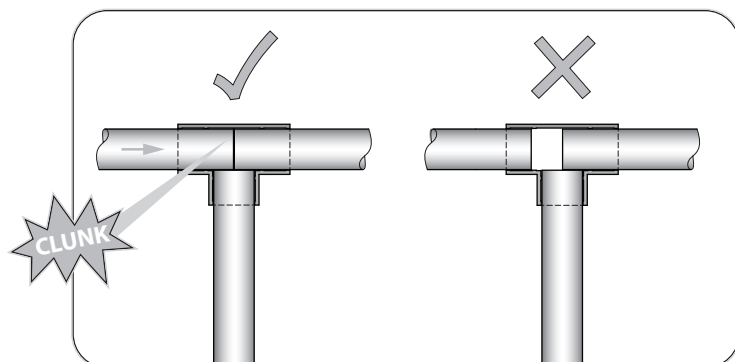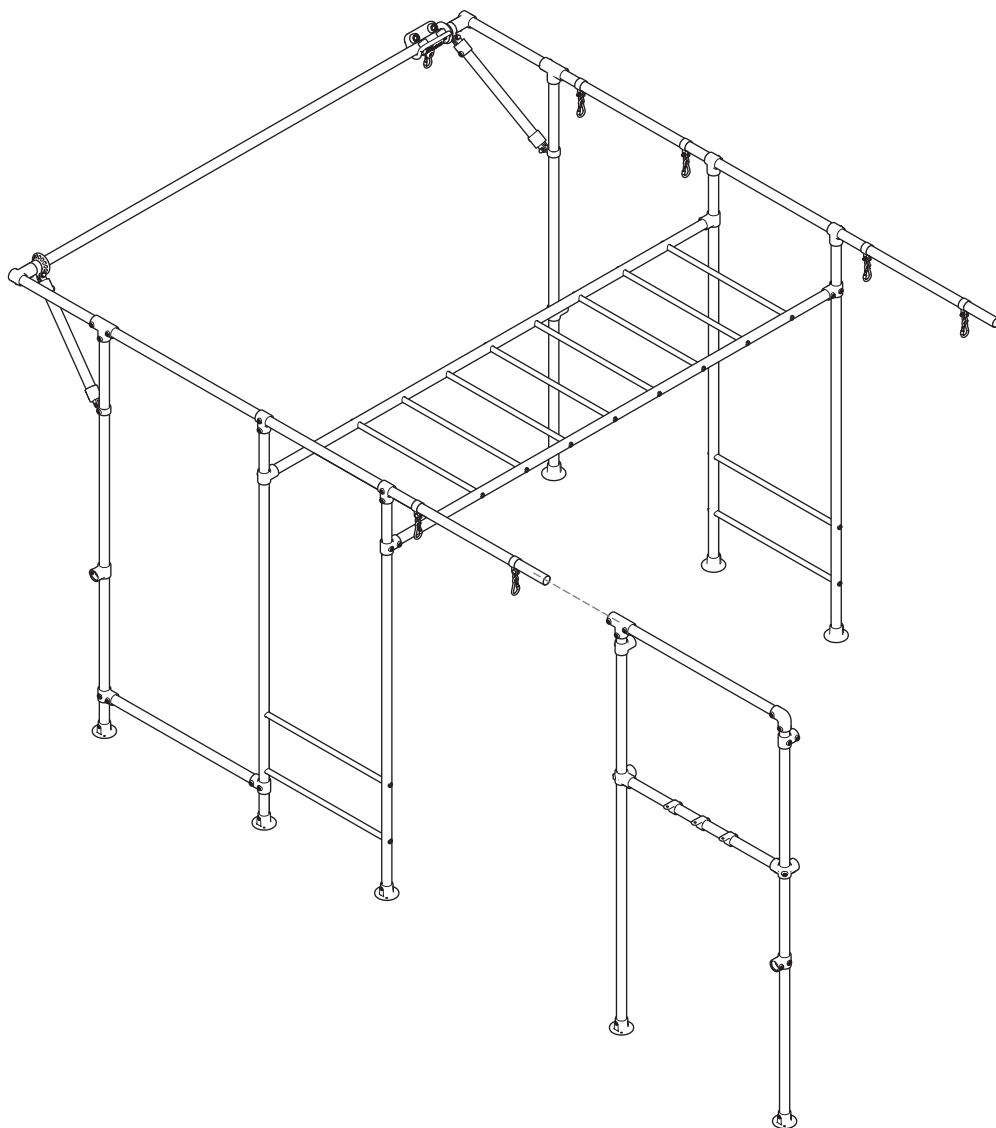


Ensure swing bar is fully engaged into the long tee.


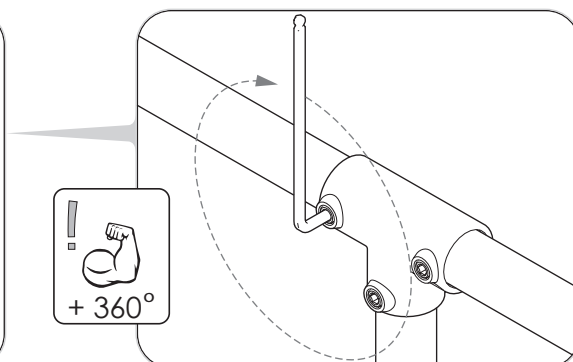


Fully tighten the long tee grub screws.



31 ADD TUBES TO CLUBHOUSE FRAME SECTION

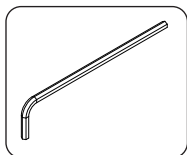


Assemble the parts as shown below.
Add two 48Dia x 2950mm tubes to
the top two Short Tees. Tighten grub
screws.

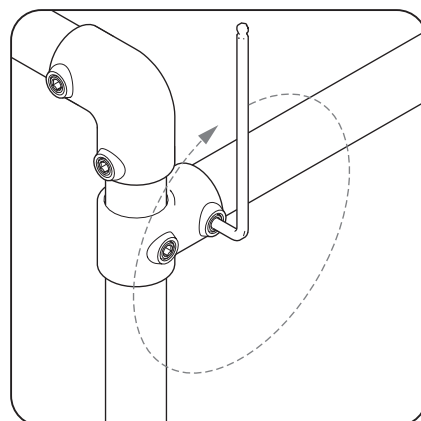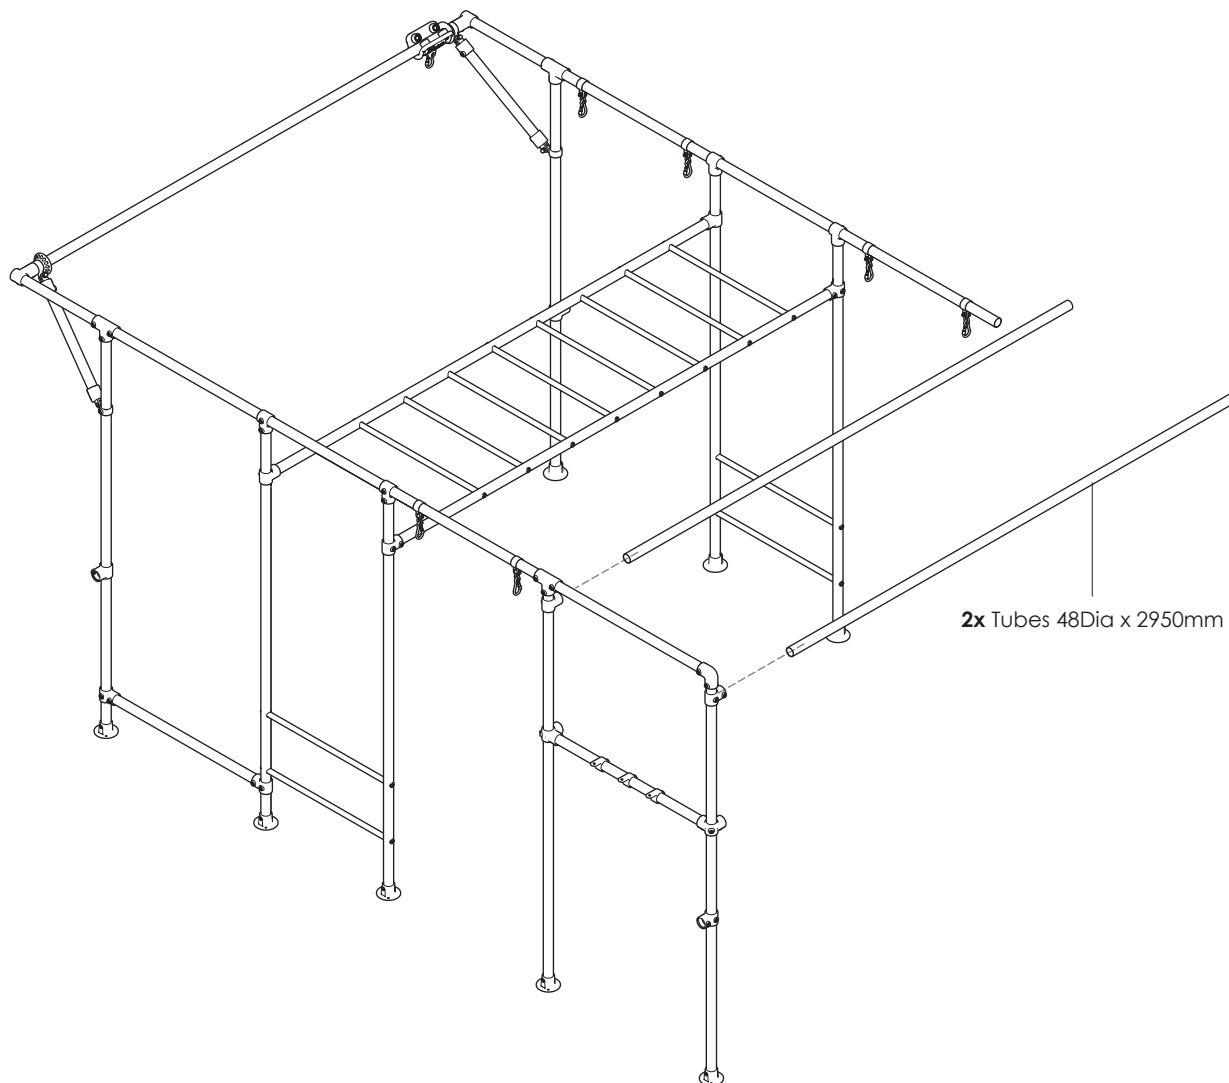

32 ADD CLUBHOUSE

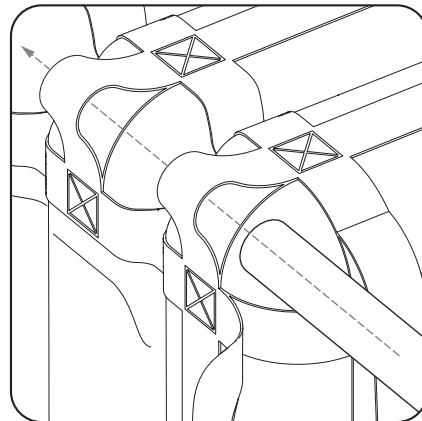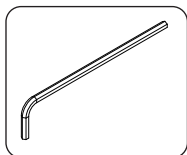


Assemble the parts as illustrated below. Slide the Clubhouse onto the two 2950mm tubes. Slide two additional 2950mm tubes through the bottom hoops and firmly tighten all grub screws.

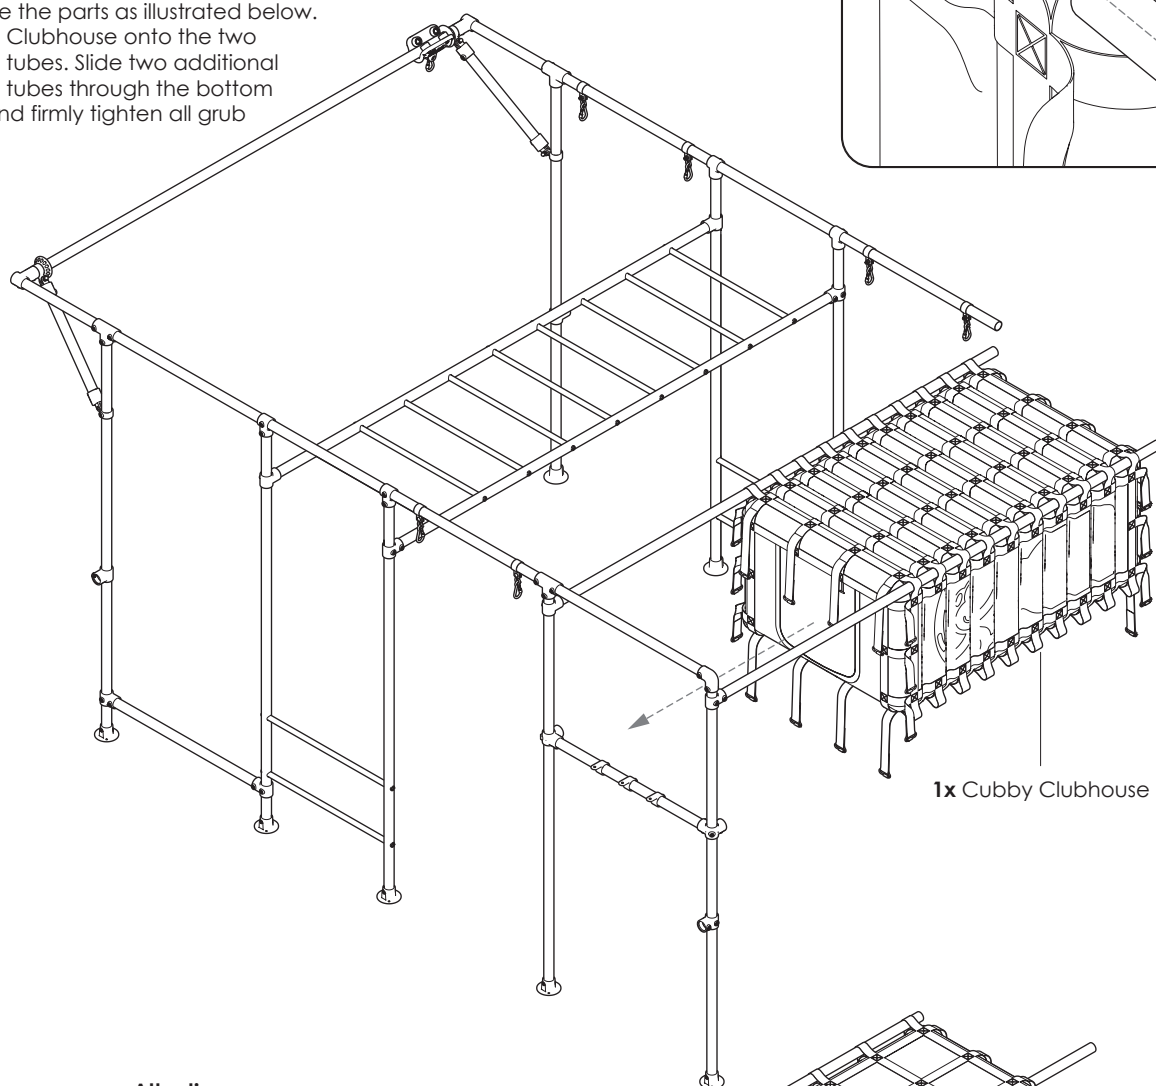

1x Cubby Clubhouse


Attention

To make installation easier, loosen the straight through corner fittings when installing the bottom two 2950mm tubes.

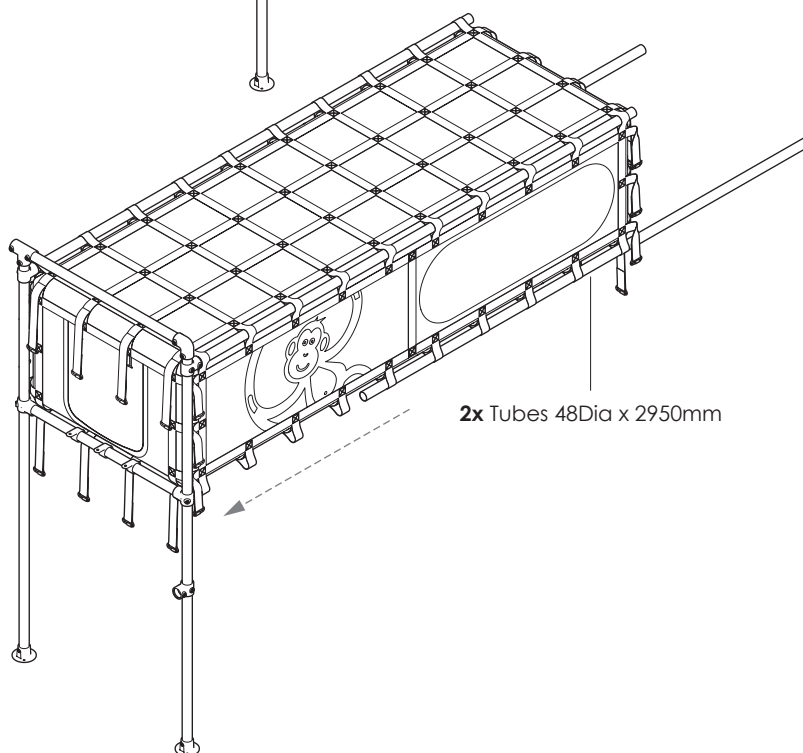


2x Tubes 48Dia x 2950mm


33 ASSEMBLE CLUBHOUSE FRAME

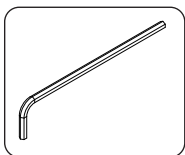


Assemble the tubes as illustrated below.

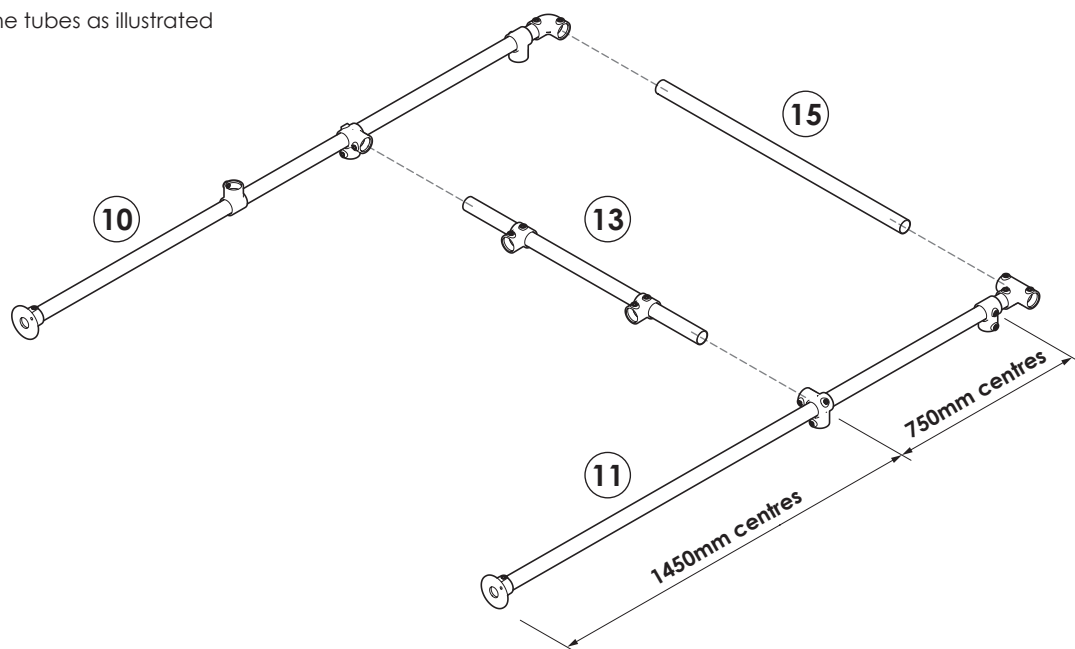


34 ASSEMBLE CLUBHOUSE LADDER

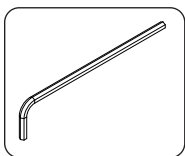



Assemble the tubes as illustrated below.

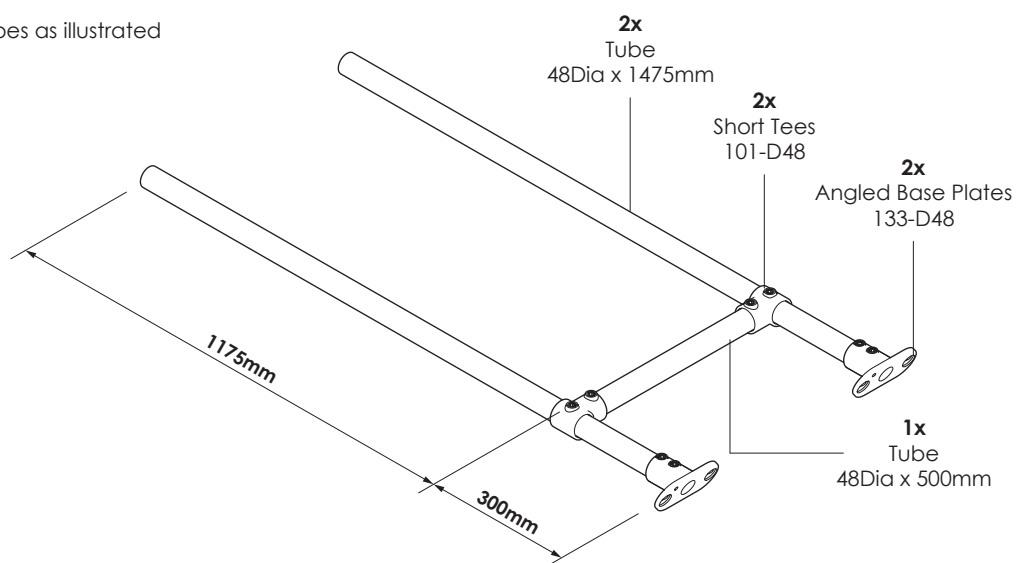


35 ATTACH TUBES

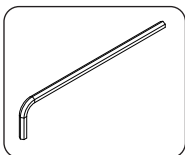

Attach the clubhouse frame to the end of the clubhouse. Firmly tighten all grub screws.

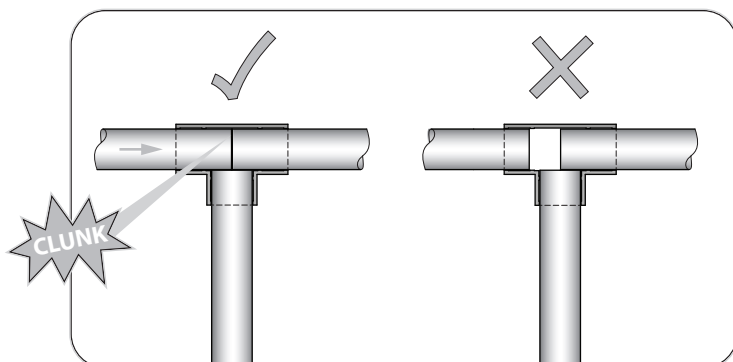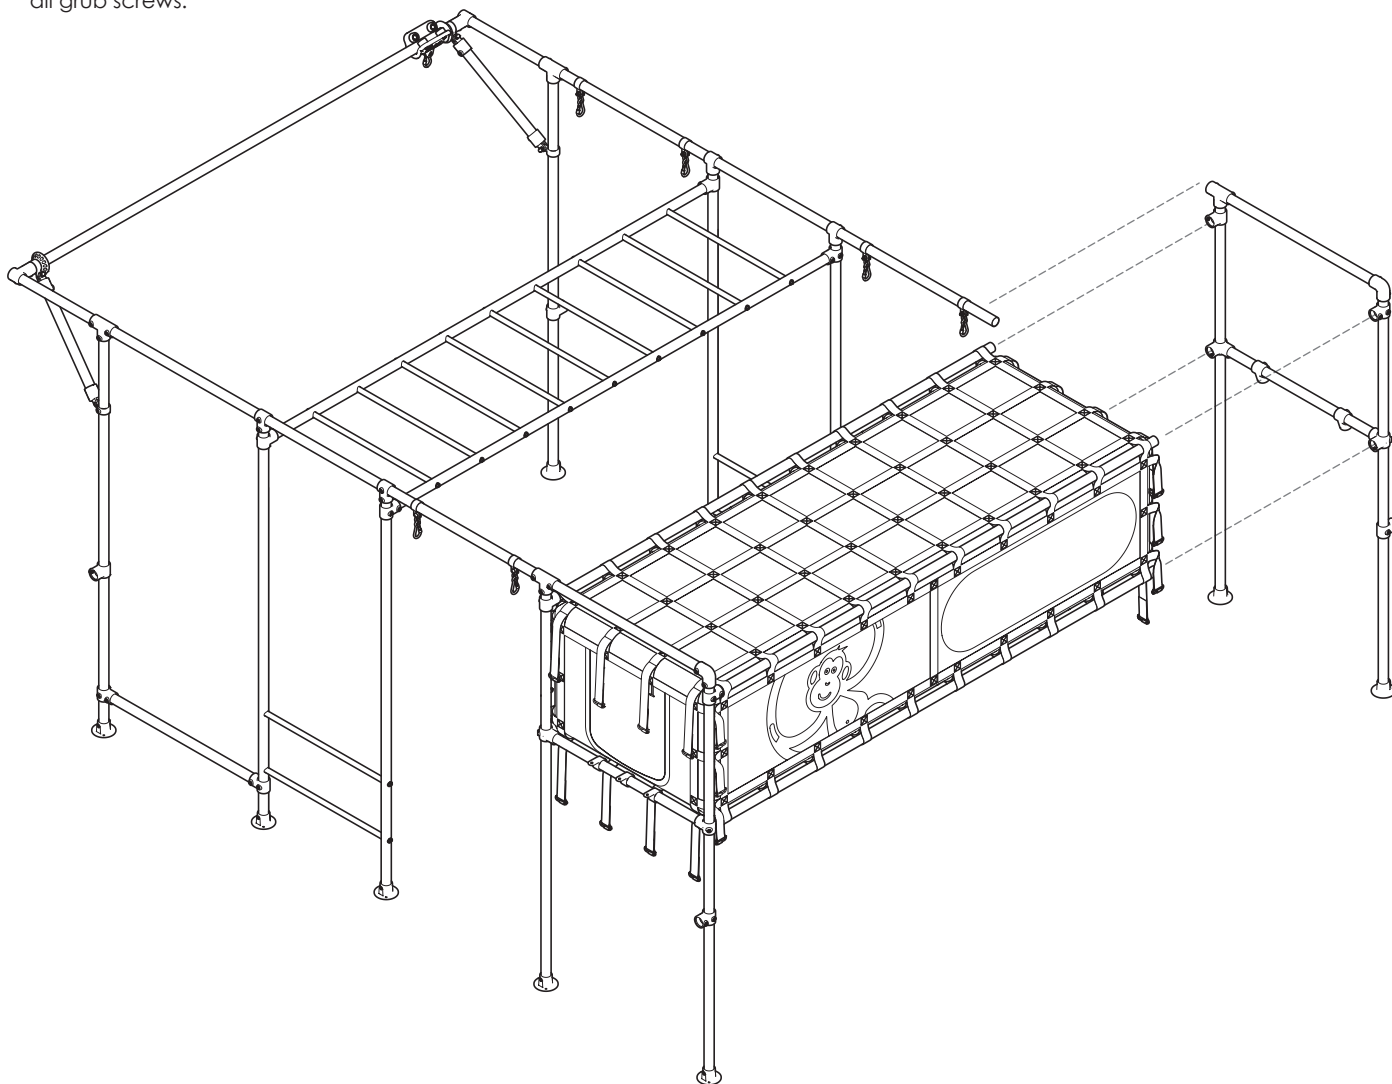


Ensure swing bar is fully engaged into the long tee.








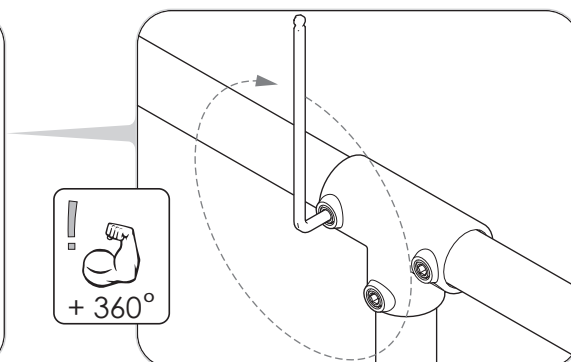


Fully tighten the long tee grub screws.


36 TIGHTENING STRAPS

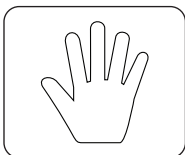



Loop the straps around the sides and bottom tubes, secure them in place using the quick links.

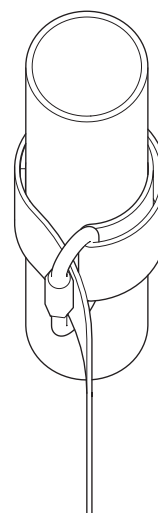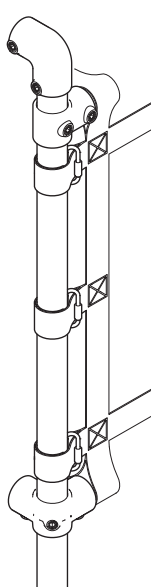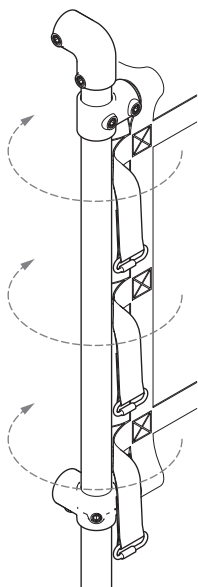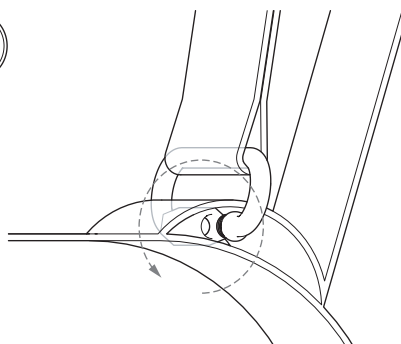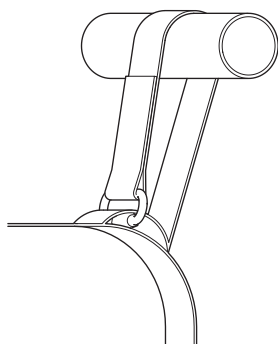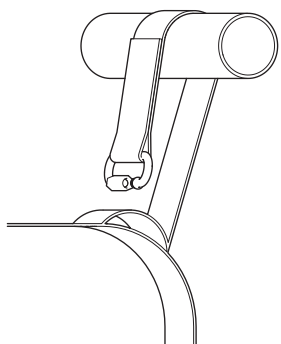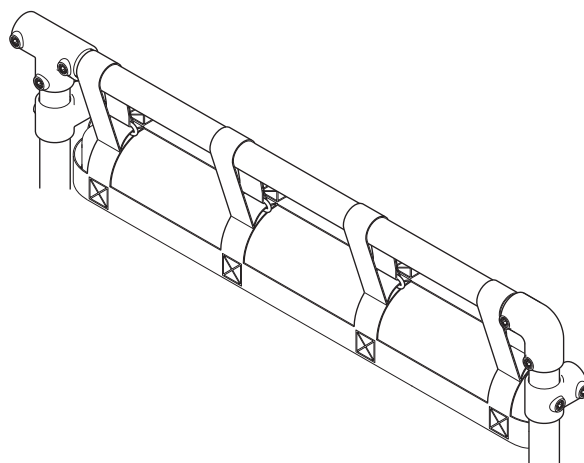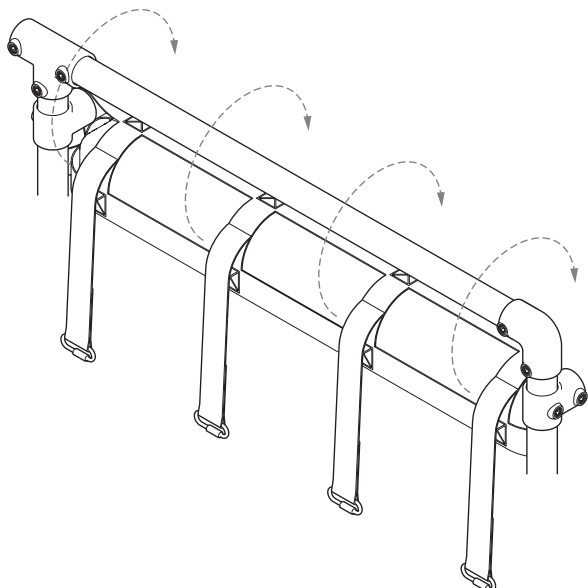


37 ASSEMBLE CARGO NET FRAME

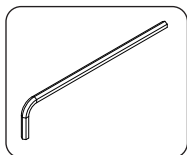

Attach the clubhouse ladder as illustrated below. Firmly tighten all grub screws.




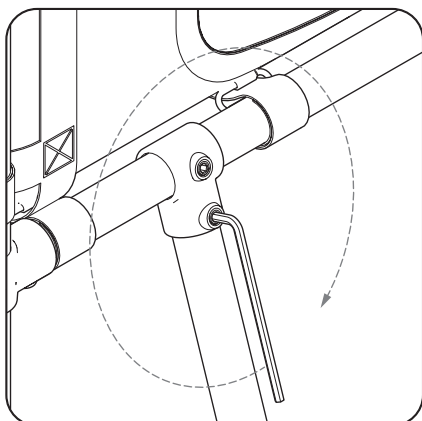
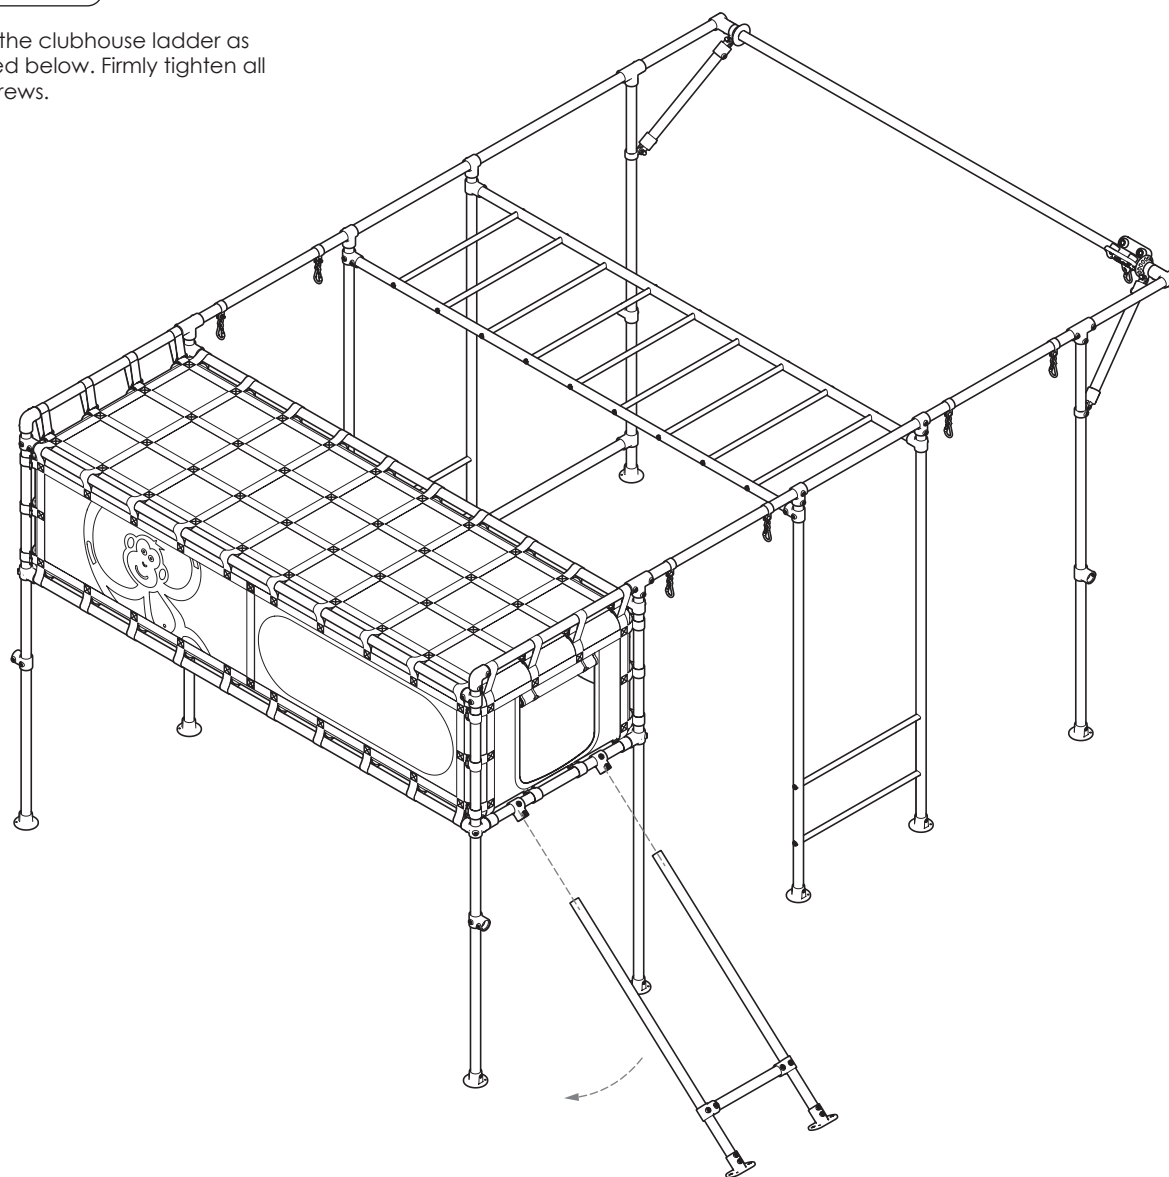


38 ATTACH CARGO NET


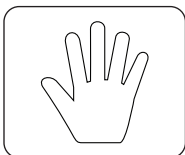


Loop the cargo net straps over the tube and thread them through the quick links. Tighten the top quick links first. Then tighten the quick links on both sides of the cargo net, followed by the bottom quick links.





For easier tensioning, keep the short tees and bottom tube loose during installation. Apply downward pressure to the tube to tension the cargo net, then fully tighten the short tees

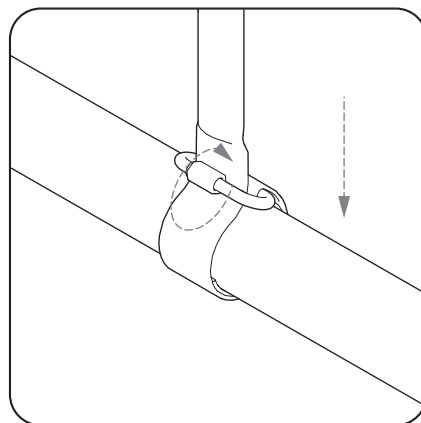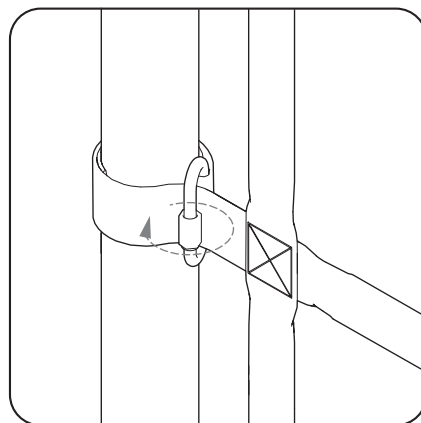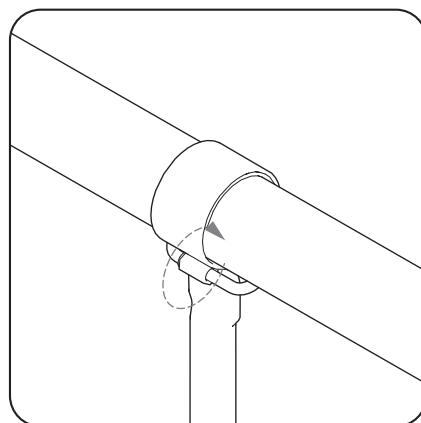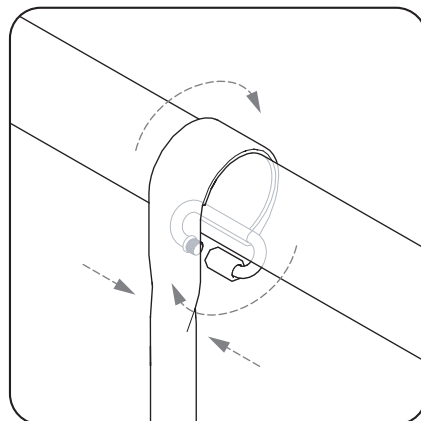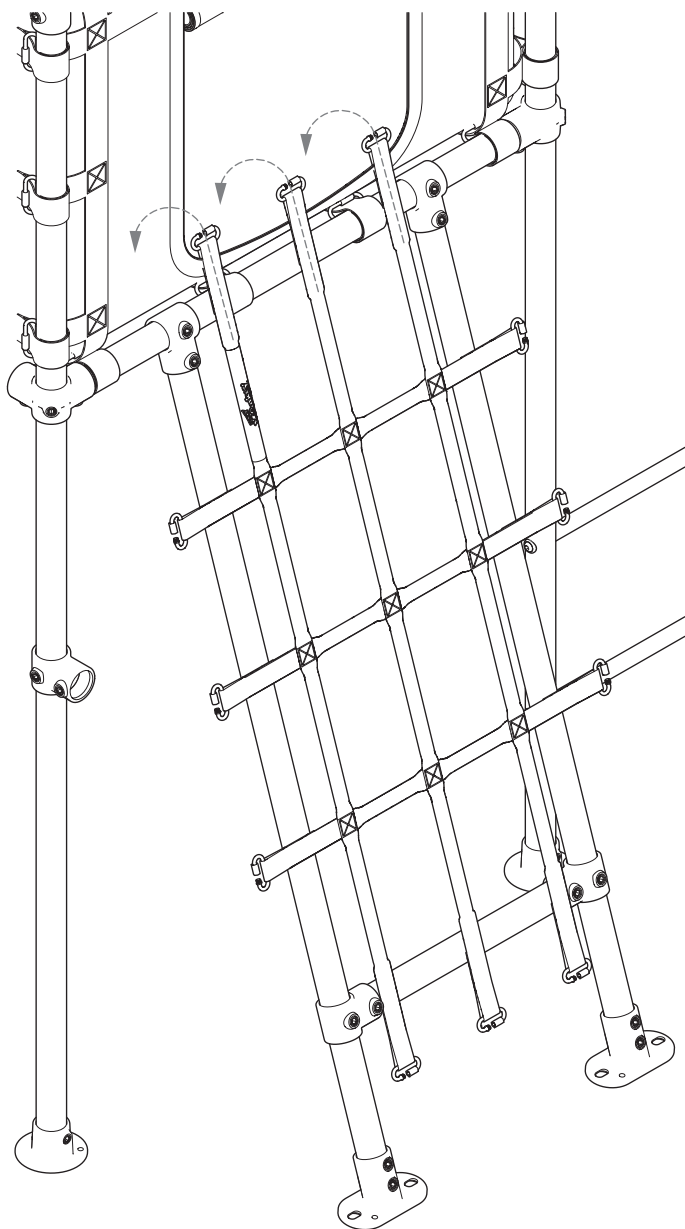


39 ATTACH SLIDE

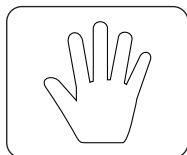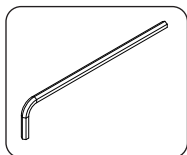



Lift the slide onto the three 198-D48 bracket fittings and align the holes. Add the M10 washers and bolts as illustrated below. Fully tighten all bolts and screws.

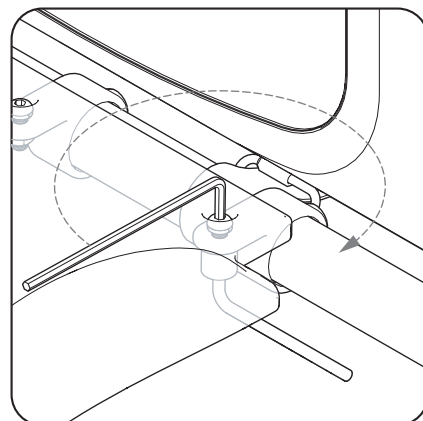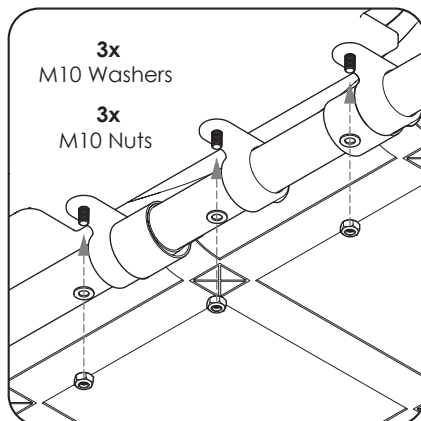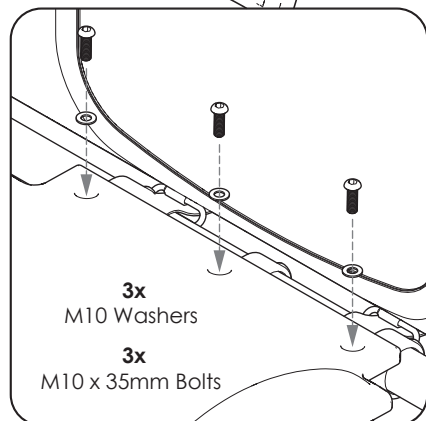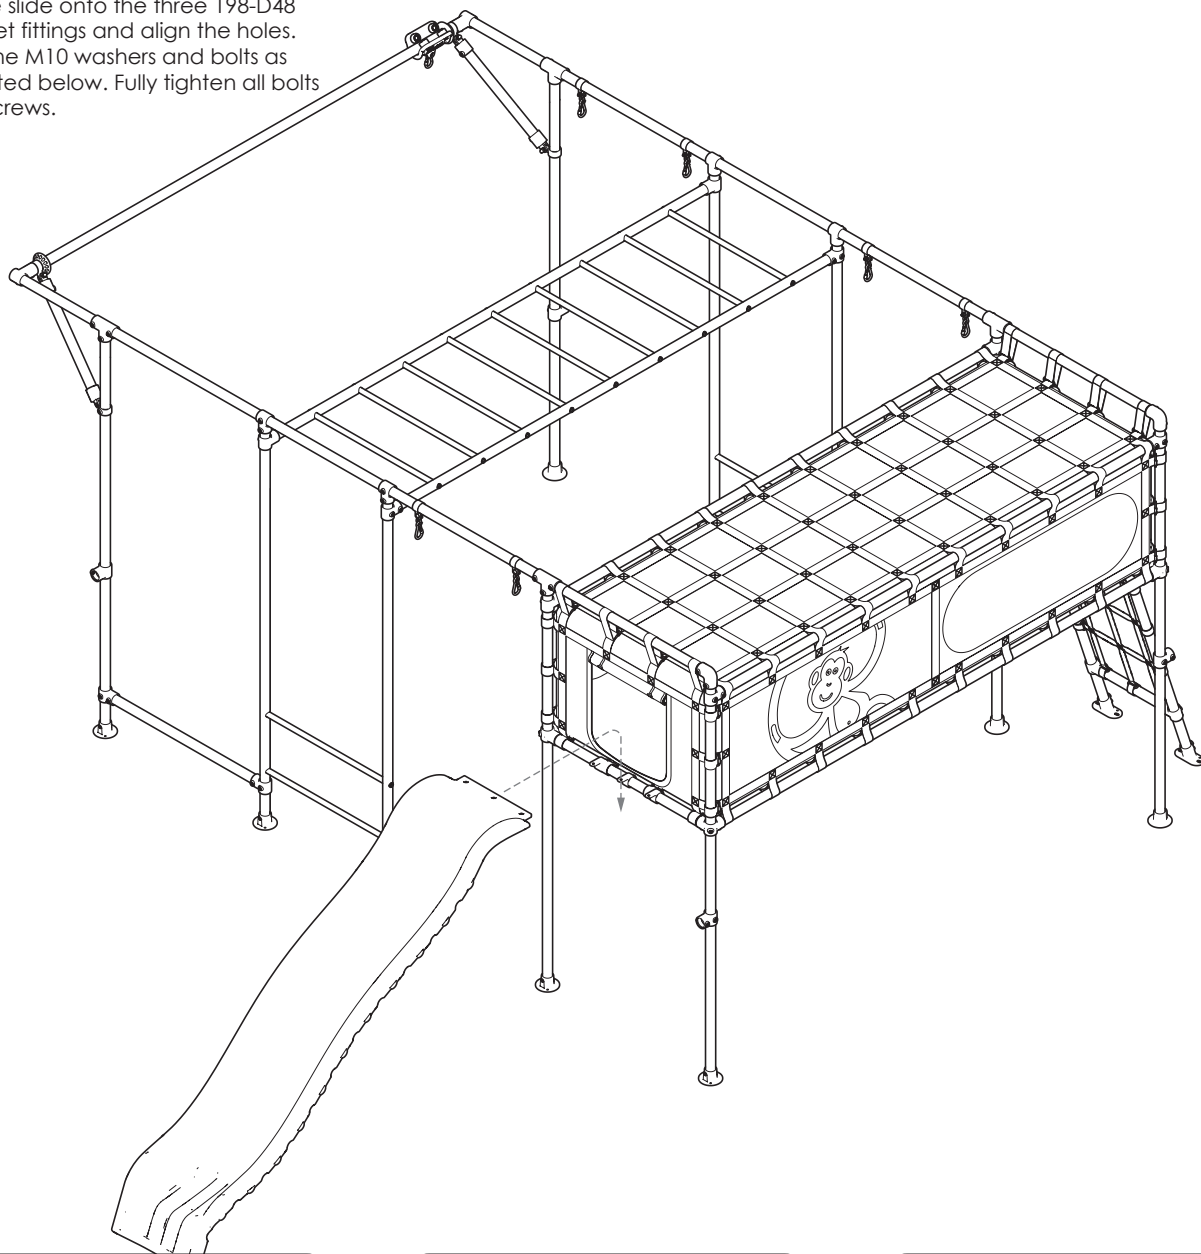


40 FINISH

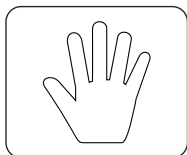


Add the clip-in pocket to the inside of the clubhouse.

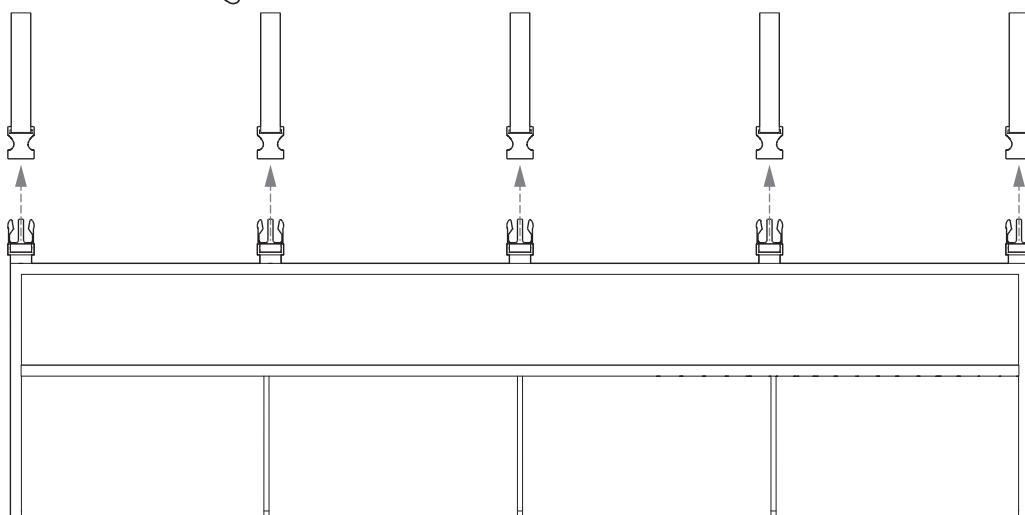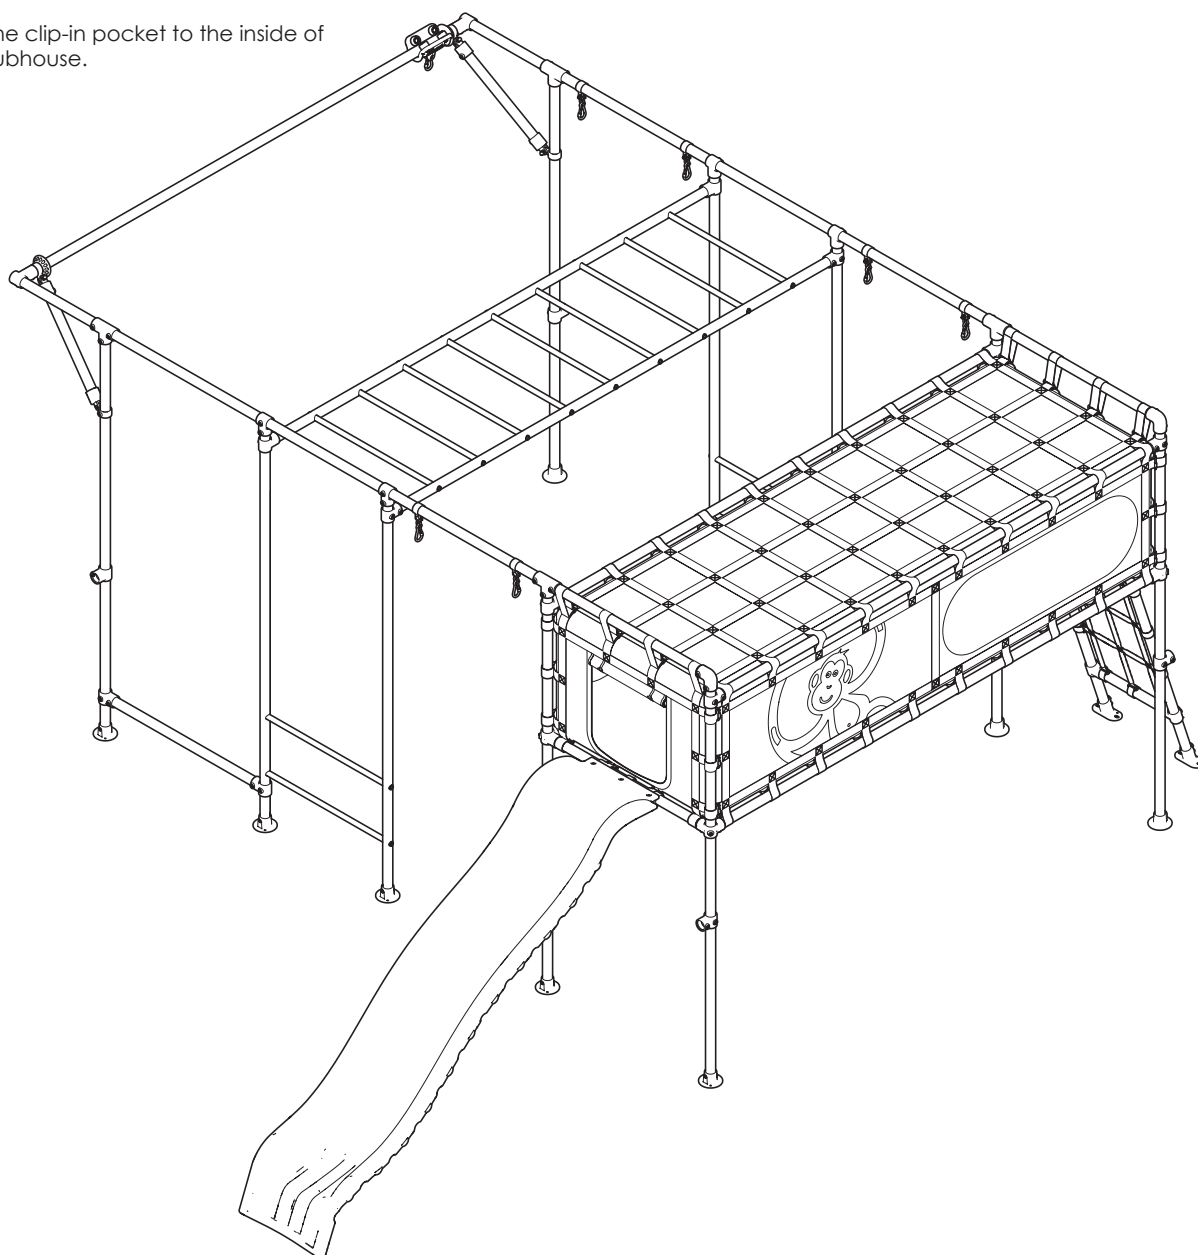

41 ASSEMBLE TWIRLY WHIRLY BARS



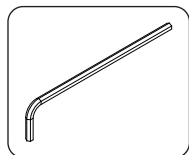


Assemble the Twirly Whirly Bars as illustrated below.

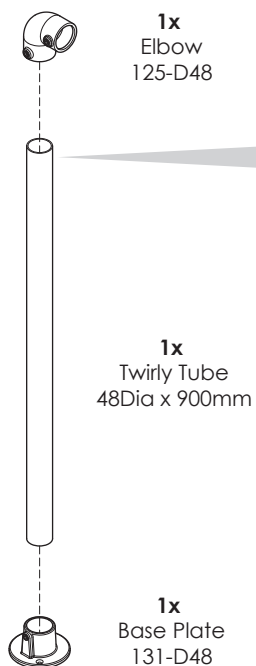


42 ATTACH HORIZONTAL TWIRLY TUBE

Fully insert twirly tube then firmly tighten all grub screws.

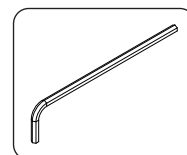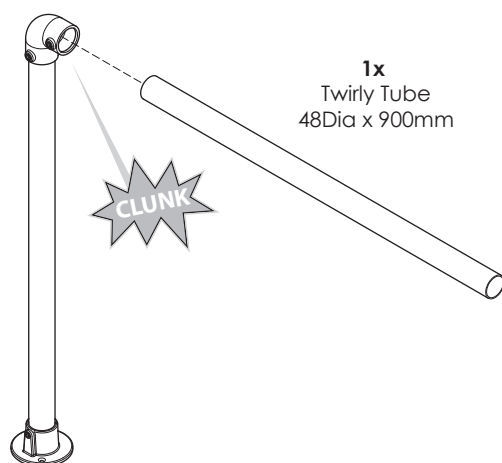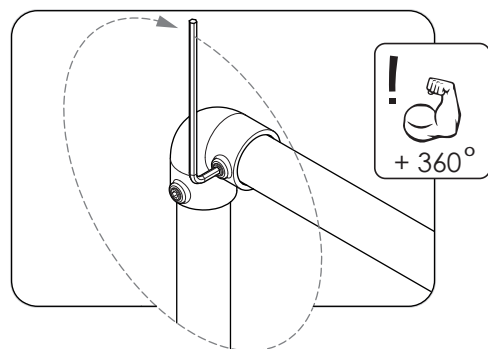


43 REPEAT STEPS 41 - 42 FOR 3 MORE TWIRLY WHIRLY BARS.


44 TWIRLY WHIRLY BAR x4

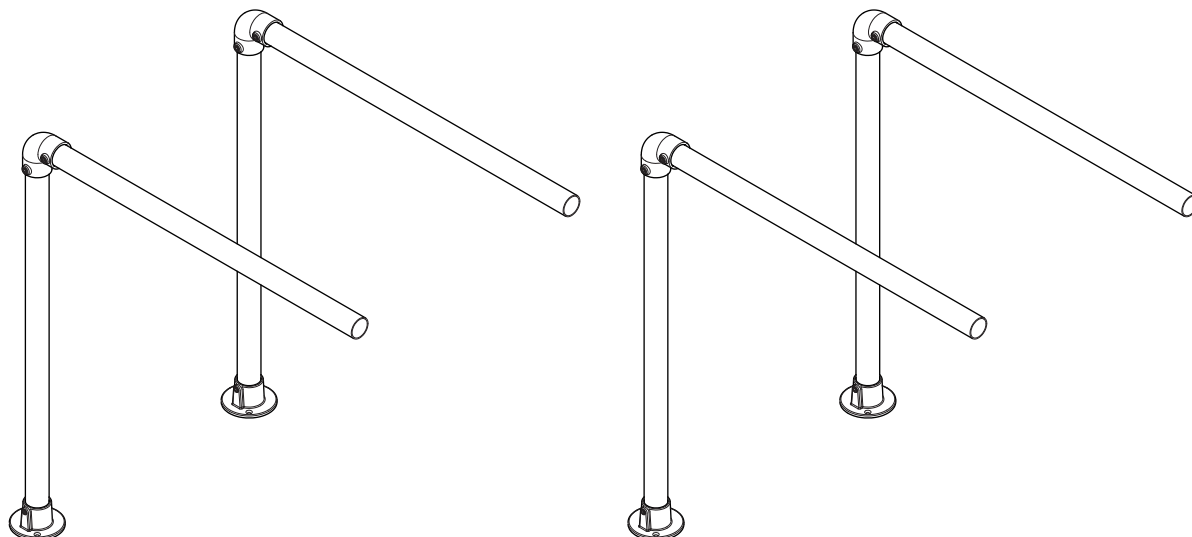


45 ATTACH TWIRLY WHIRLY BARS

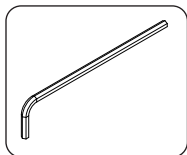


Adjust height of short tees to align with horizontal twirly whirly bar. Tighten all grub screws fixing twirly whirlys to legs.

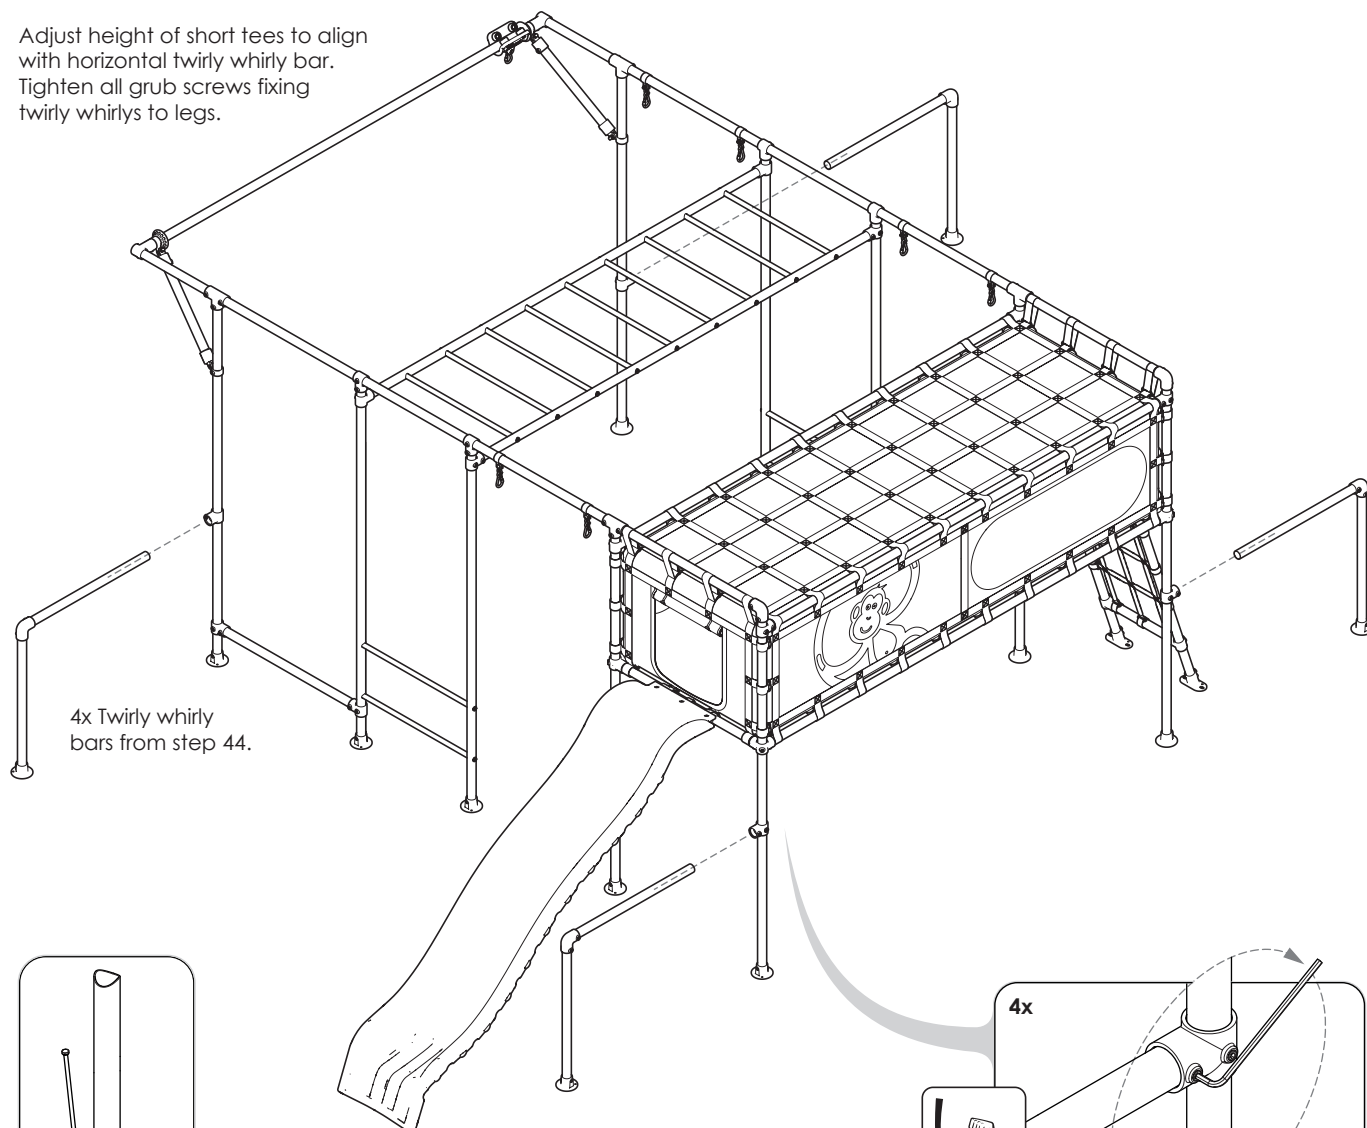

4x Twirly whirly bars from step 44.


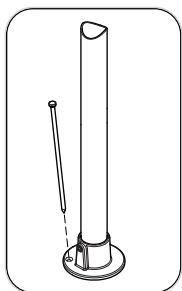


Peg down the remaining base plates

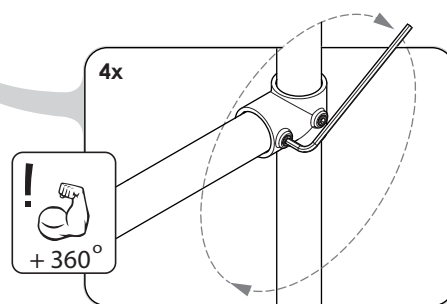


Tighten all grub screws.

46 CHECK ALL FITTING GRUB SCREWS ARE FULLY TIGHTENED

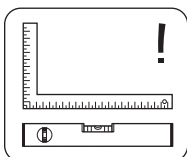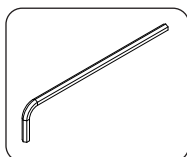


1. Ensure frame is square and level.
2. Firmly tighten all grub screws and bolts.

47 ASSEMBLE CARGO NET FRAME


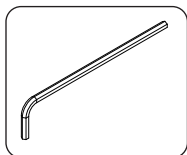


To reduce movement in your frame load your twirly whirly bars as follows.

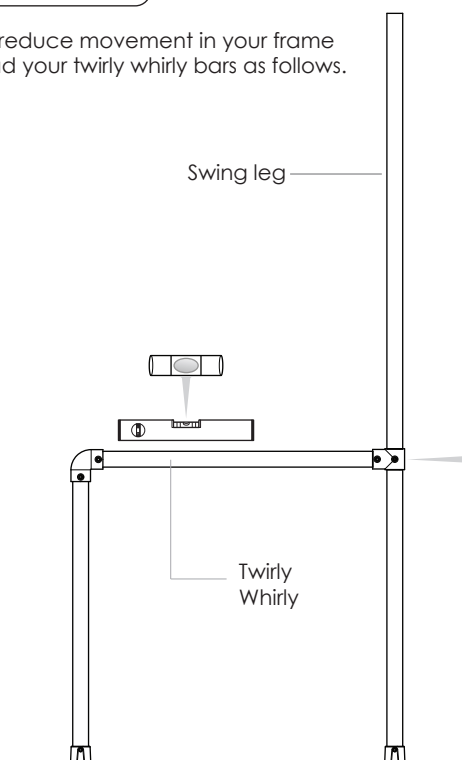


1. Ensure twirly whirly is level and square & swing leg is pegged down.


2. Loosen the grub screw fixing the short tee to the swing leg.

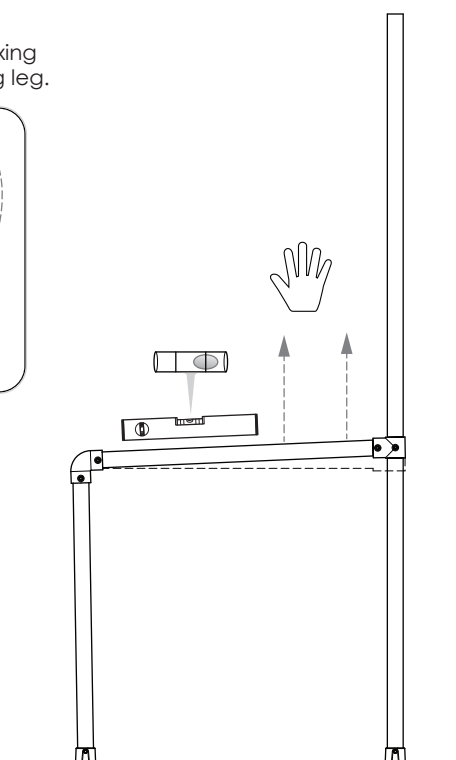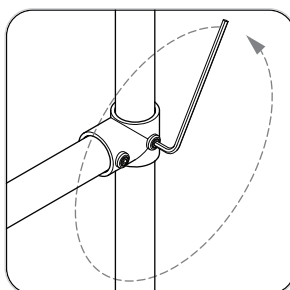


3. Pull upwards on the twirly whirly bar to make a slight angle. (Half a bubble off center on the level)

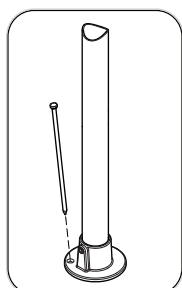

4. Peg down base plates on twirly whirly.

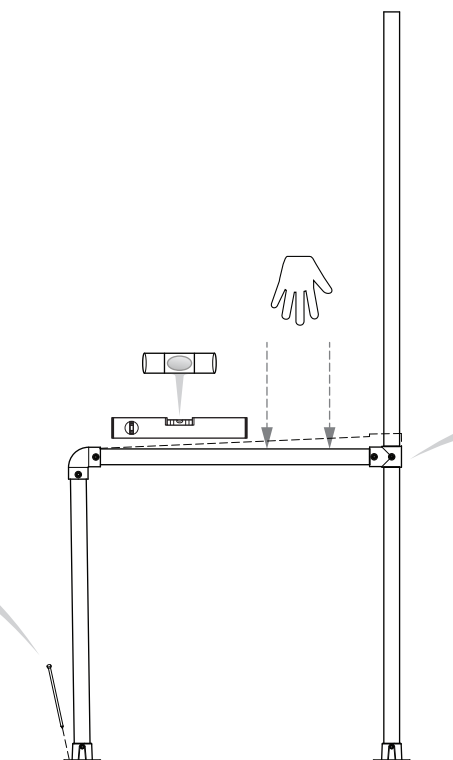


5. Push down on the twirly whirly bar until horizontal bar is level.






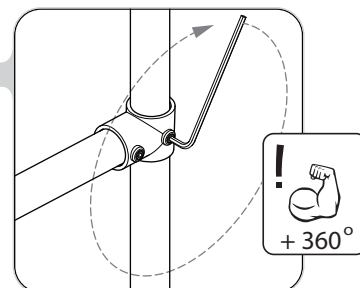


6. Tighten grub screw fixing the short tee to the swing leg tube. Apply to all twirly whirlys.



48 ASSEMBLE CARGO NET FRAME

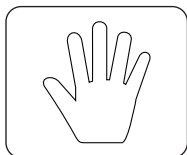

1. Loop the cargo net strap over the tube and feed it into the quick links. Tighten the top quick links.
2. Tighten the quick links on both sides of the cargo net.
3. Tighten the bottom quick links.
4. If you keep the short tees and tube on the bottom loose, you can add tension to the cargo net once installed by adding downwards pressure to the tube.
5. Tighten the short tees.

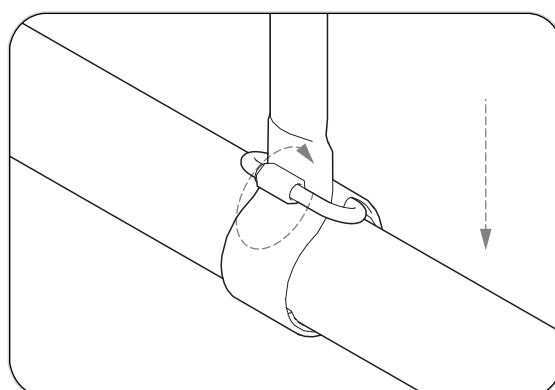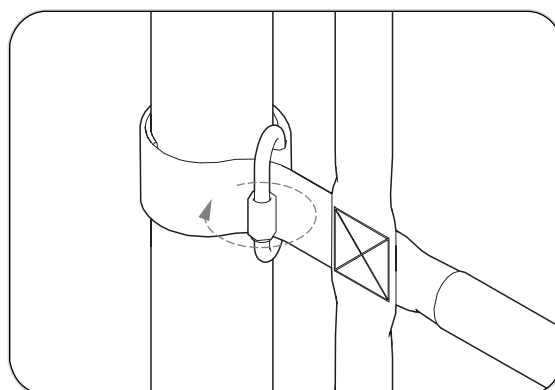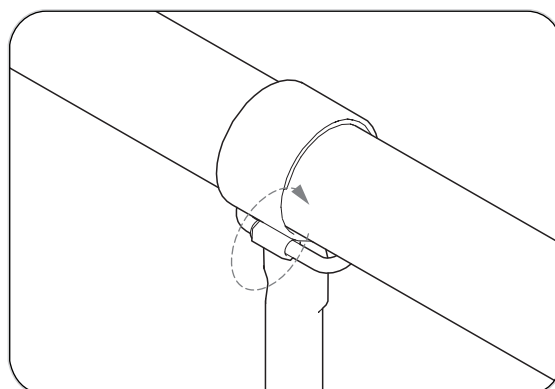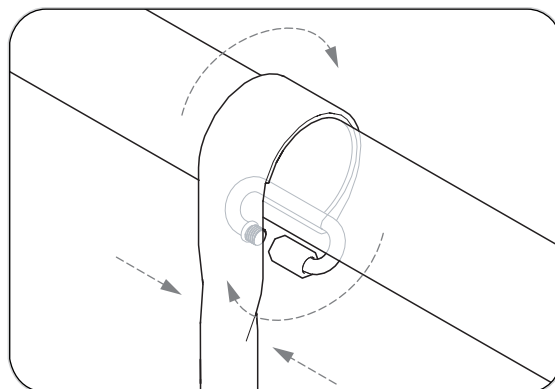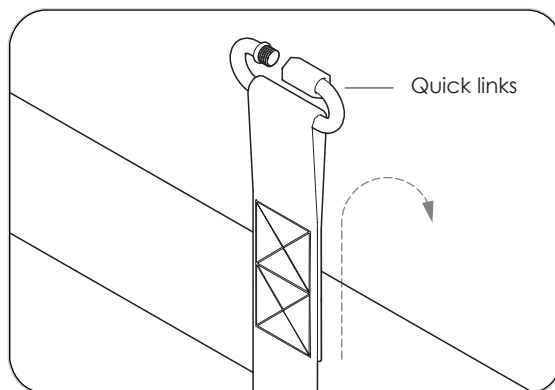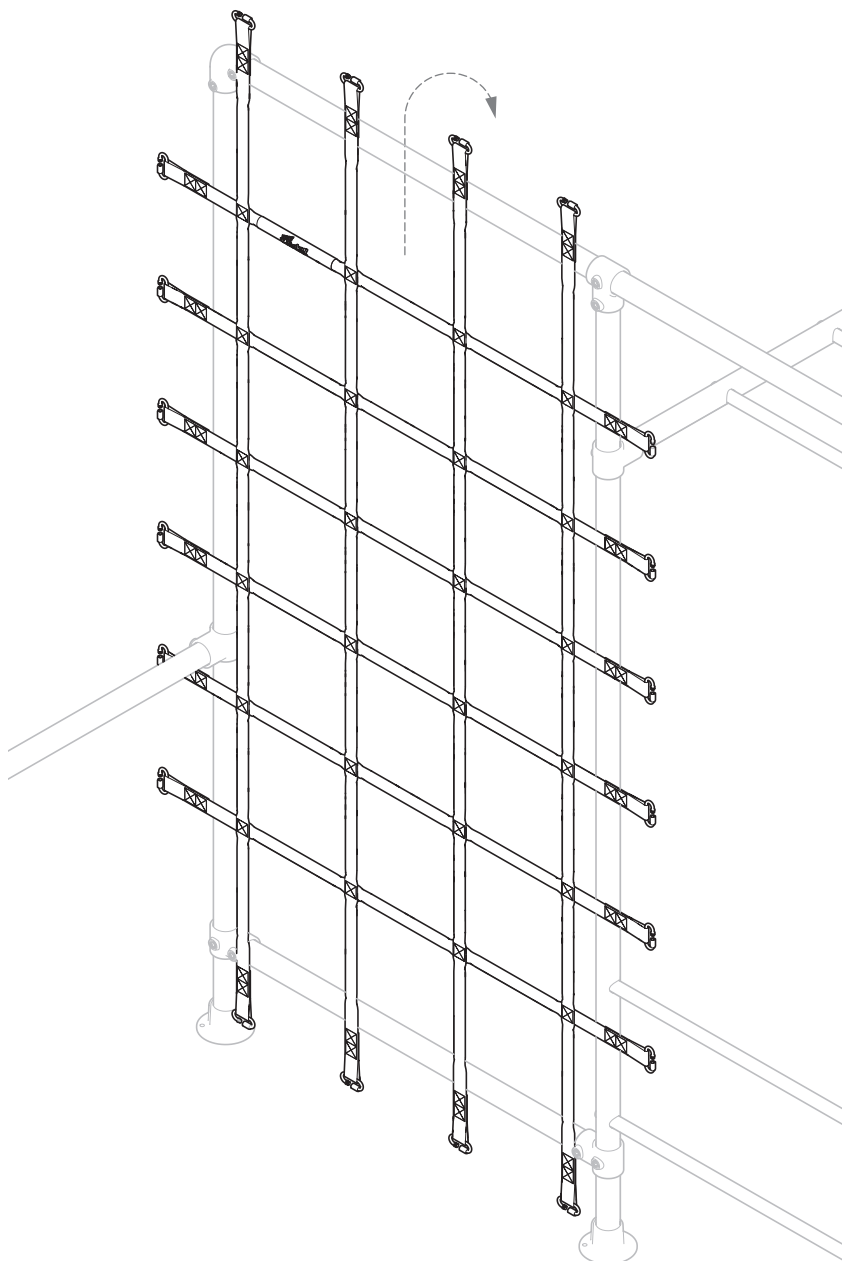

49 MAINTENANCE.

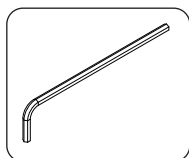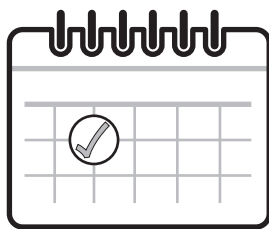

At the beginning of each heavy play session (especially a party) and twice a month during play season ensure;

1. Tighten all hardware - grub screws, nuts and bolts.
2. Pegs are in place and fully secure.
3. Lubricate all metallic moving parts with WD40 or Vaseline - (trolley and swing hooks.)
4. Ensure your frame is level and square.

FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH.

**FOR MORE INFORMATION AND ASSEMBLY TIPS
PLEASE REFER TO OUR WEBSITE VIDEO INSTRUCTION SECTION AT
[HTTP://WWW.FUNKYMONKEYBARS.COM/PAGES/VIDEOS](http://www.funkymonkeybars.com/pages/videos)**

50 HAVE FUN





ABN 72 164 496 520



1300 912 198



info@funkymonkeybars.com



www.funkymonkeybars.com



8/307 Stock Road,
O'Connor WA 6163



WE ARE SOCIAL MONKEYS



Australian Government
IP Australia

All Funky Monkey Bars® designs are registered
and protected under IP Australia certification.